Portable media

- 8. When prompted, enter the PIN (Personal Identification Number) code into your device. See your device's operating instructions for more information.
- Once your device is paired and connected to the system, a confirmation message will be displayed before switching to the My music, Bluetooth view.

Note: Due to the duration of a Bluetooth wireless technology device search, it is advised that the time out to home screen feature is switched off before attempting to search for Bluetooth wireless technology devices. This setting can be changed within Set-up, Screen, Time out home

CHANGING/DISCONNECTING A DEVICE

- 1. From the menu, select Change device.
- Select Disconnect. A confirmation pop-up will appear and then you will be given the option to Search new or select a different device from the list of paired devices.