

6. Once set, the timer events can be turned on or off as required in the Timed climate screen by selecting the 7 day timer or the single event soft key.


**Note:** Set times should to be programmed 20 minutes before the planned journey.

**Note:** The time format, 12/24 hour clock, is determined by the time settings currently selected in the **System settings** menu. See 46, **INSTRUMENT PANEL MENU**.

**Note:** Timed climate will only operate once between engine starts. For example, a remote timed climate request will not be performed if a programmed timed climate event has already occurred.

A current heating cycle will be cancelled if the engine is started. Any programmed heating cycle may be cancelled by touching the relevant power soft key on the timer set up menu or the **Power** soft key on the **Timed Climate** information home menu.

## USING THE TIMED CLIMATE REMOTE

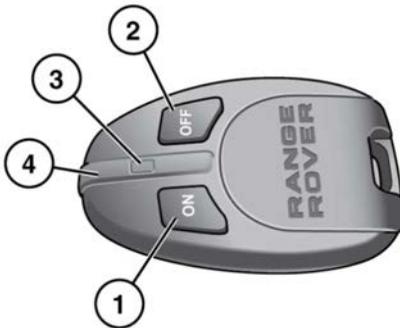

E144900

1. **ON** button.
2. **OFF** button.
3. LED (operation indicator).
4. Antenna.

**Note:** Avoid touching the antenna when operating the **ON** or **OFF** button.

The remote control has an approximate range of 100 metres. There is no need to point the remote control at the vehicle.

Press and hold the **ON** button for approximately 2 seconds. The LED will illuminate green to confirm that a remote Climate program has been initiated. The LED continues to flash for a few seconds to indicate that the heater is active.

The remote Climate program will continue for 20-30 minutes, after which it switches off automatically to prevent the vehicle's battery from discharging. It also turns off automatically if the engine is started.

The LED indicator signals various states and conditions for the remote climate, as follows:

- Illuminates green when the **ON** button is pressed and then quickly flashes green, to indicate that heater operation has been requested.
- Illuminates green followed by red when the **OFF** button is pressed, to indicate that the heater has been requested to shut down.
- Illuminates green and then quickly flashes red when either the **ON** or **OFF** button is pressed, to indicate that there is no communication with the receiver. This normally occurs if the vehicle is too far away.
- Illuminates green and then slowly flashes red when either the **ON** or **OFF** button is pressed, to indicate that there is an error.
- Flashes red when either the **ON** or **OFF** button is pressed, to indicate that the Timed climate remote battery needs replacing.

**Note:** The Timed climate remote will only operate once per engine start to maintain battery condition.