
Telephone

TELEPHONE SYSTEM OVERVIEW

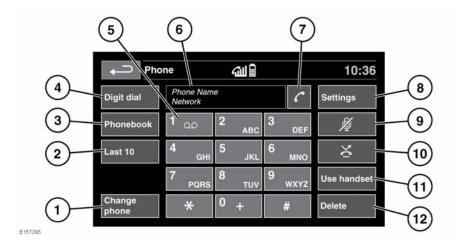

- Change phone: Search for a new phone, or change to another paired phone.
- 2. Last 10: Access the last 10 dialled, received and missed calls.
- Phonebook: Access the downloaded phonebook.
- 4. **Digit dialling**: Access the Digit dial mode.
- 5. Touch and hold to retrieve your voice mail.
- **6.** Status display: Displays the name and/or number dialled and call duration.
- 7. Call Connect/Disconnect icons. Touch to send/accept or end/reject a call.
- **8. Settings**: Access the Voice mail set up, Answer options and Phone options.
- Mute microphone: Initiate Privacy mode. While selected, the caller will not hear you talking.
- Auto reject: When active, any incoming calls will be rejected or diverted to voice mail (dependent on the current mobile phone settings).

- **11. Use handset**: Switch the call to your mobile phone.
- Delete: Touch to delete the last entered digit and hold to delete the whole entered number.

BLUETOOTH® INFORMATION



Bluetooth® is the name for short-range Radio Frequency (RF) technology that allows electronic devices to communicate wirelessly with each other.

The Land Rover **Bluetooth** wireless technology system supports **Bluetooth**® Hands-Free Profile (HFP), Advanced Audio Distribution Profile (A2DP) and Audio Video Remote Control Profile (AVRCP).

Note: HFP and A2DP/AVRCP profiles can be connected independently, so a phone can be connected via one, while a media device can be connected via the other, at the same time.