
VIDEO MEDIA PLAYER CONTROLS

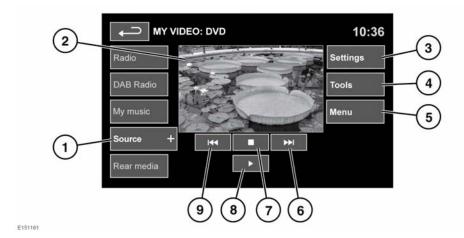

Press the **AUDIO/VIDEO** button or touch the **Audio/Video** icon from the Touch screen **Home menu** and then select the **TV/My video** icon.

Source: TV band/video input selection.
 Touch to view and select DVD or other forms of video media (CD/USB), provided the relevant media is present. The selected option will be displayed.

Note: After 5 seconds without use, the **TV/My video** menu will close.

Preview screen for video media information:
 Touch to select the Full screen mode.
 Short touch the screen again to view the controls at any time.

To return to the Preview mode, touch and hold the full screen view.

3. Settings: Depending on the video media specification, there are 3 sub-menus within settings: Options, VOD (Video On Demand) and Audio settings.

VOD allows playing of DivX VOD content from a video media. The eight digit registration code will be displayed when the VOD soft key is touched.

The player must also be registered with DivX. See **156. LICENSING**.

- **4. Tools**: The following options can be selected:
 - GOTO: The GOTO menu allows you to access specific parts of the video, by Chapter or Title number.
 - Subtitles.
 - Angle.
 - Audio.
 - Top menu.
- Menu: Select to view the Video media menu. On some screens, this may be replaced by a Browse soft key.
- Seek up: Select to view the next DVD chapter or to scroll through video media files.