

GLOBAL OPENING

Press and hold the unlock button for 3 seconds to unlock the vehicle and open all windows.

To cancel Global opening, press any of the buttons on the Smart key or operate the driver's window switches. To stop a particular window opening, operate the relevant window switch.

This feature can be enabled/disabled via the **Vehicle Set-Up** menu (see **46, INSTRUMENT PANEL MENU**).

KEYLESS ENTRY

Keyless entry allows the vehicle to be opened if a Smart key is within 1.0m (3ft) of the door handle or the tailgate external switch.

Note: *The Smart key may not be detected if it is placed within a metal container or if it is shielded by a device with a back-lit LCD screen, such as a smart phone, laptop (including laptop bag), games console, etc. Keep the Smart key clear of such devices when attempting Keyless entry or Keyless starting.*

Note: *The Smart key needs only to be on the driver's person or in a non-metallic bag or briefcase. It does not need to be exposed or handled.*

To enter the vehicle, just pull the door handle. The alarm will be disarmed and the doors unlocked according to the current unlock/entry setting (Single or Multi-Point). The hazard warning lamps will flash twice as 'unlock' confirmation. Power folded mirrors will fold out (if enabled).

Note: *If Single-Point entry is the current security setting and a door other than the driver's door is opened first, all doors will unlock.*

CONVENIENCE MODE

When the door is opened using either the Smart key or Keyless entry, the vehicle's electrical system initiates the Convenience mode. The following systems become functional:

- Driver position memory.
- Seat and steering column adjustment.
- Interior and exterior lighting.
- Message centre.
- Auxiliary power socket.

STEERING COLUMN LOCK

The electric steering column lock will lock/unlock when the vehicle is locked/unlocked.

If any malfunction of the steering column lock occurs, a message will be displayed in the Message centre. If this occurs:

1. From the driver's seat, lock and then unlock the vehicle using the Smart key.
2. Try again to unlock the steering column lock, by turning the steering wheel gently to the left and right while locking and then unlocking the vehicle using the Smart key.
3. If the problem persists, seek qualified assistance.

DRIVE-AWAY LOCKING

Drive-away locking automatically locks all doors when the vehicle is in motion. This feature can be enabled/disabled via the **Vehicle Set-Up** menu. See **46, INSTRUMENT PANEL MENU**).

Note: *Pressing the unlock or lock button on the driver or front passenger door after Drive-away locking has taken place, will override Drive-away locking for the current journey. See **14, DOOR LOCKS AND RELEASE LEVERS**.*