
Vehicle battery

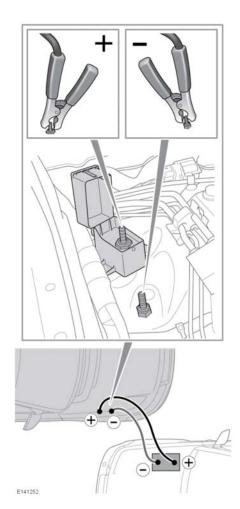

- Connect one end of the positive (Red) jump lead to the positive terminal on the donor vehicle.
- Connect the other end of the positive (Red) jump lead to the positive jump start terminal on the disabled vehicle.
- Connect one end of the negative (Black) jump lead to the negative terminal on the donor vehicle.

- Connect the other end of the negative (Black) jump lead to the earth/ground jump start terminal on the disabled vehicle.
 - **Note:** Check that all of the cables are clear of any moving components and that all 4 connections are secure.
- **5.** Start the engine of the donor vehicle, and allow it to idle for a few minutes.
- 6. Start the engine of the disabled vehicle.

 Note: Do not switch on any electrical circuits on the previously disabled vehicle, until after the jump leads have been removed
- Allow both vehicles to idle for a few minutes.
- 8. Switch off the donor vehicle.
- **9.** Disconnect the negative (Black) jump lead from the previously disabled vehicle.
- **10.** Disconnect the negative (Black) jump lead from the battery of the donor vehicle.
- **11.** Disconnect the positive (Red) jump lead from the previously disabled vehicle.
- **12.** Disconnect the positive (Red) jump lead from the donor vehicle.

CONNECTING A STARTING AID



Do not connect the starting aid to any battery terminal on your vehicle. Doing so may cause a spark, which can result in an explosion. It may also result in damage to the charging system.

To start the vehicle using a starting aid or a slave battery, follow the instructions in the sequence given:

 Connect the positive (Red) cable to the positive jump start terminal of the disabled vehicle.