


# Airbags

Select **Passenger Airbag** from the **Vehicle Set-up** menu, located in the **Main Menu**.

The displayed text and diagram will show the current **Passenger Airbag On** or **Off** status. Select **Change Setting** to choose either **On** or **Off**.

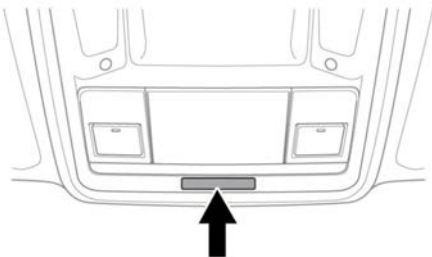


E163315


The warning lamp, mounted in the roof console, displays the operational status of the passenger front airbag, as shown in the table below.

Setting	Passenger airbag status	Airbag status indicator
Off	Disabled	PASSENGER AIRBAG OFF
On	Activated	ON PASSENGER AIRBAG *

\* Displays for 60 seconds, then extinguishes.

**Note:** The Instrument panel also displays a warning for 4 seconds every time the ignition is switched on.

 As soon as the child seat is removed from the front passenger seat, the airbag must be turned on. Failure to do so, will put any front seat passengers at greater risk of death or serious injury in the event of an accident.

 When checking the operational status of the front passenger airbag, make sure that the ignition is switched on and the warning lamp bulb check period of 8 seconds has elapsed.

 The passenger airbag must be disabled when a rearward facing child restraint is fitted to the front passenger seat.



**Do not fit a child restraint to the front passenger seat if the airbag warning lamp illuminates continuously with the ignition on.**

## AIRBAG SERVICE INFORMATION



**Do not attempt to service, repair, replace, modify or tamper with, any part of the SRS. This includes wiring or components in the vicinity of SRS components. Doing so may cause the system to trigger or render the system inoperative.**



**Do not use any electrical test equipment or devices in the vicinity of SRS components or wiring. Doing so may cause the system to trigger, or render the system inoperative.**

All of the following operations should only be carried out by a Dealer/Authorised Repairer or suitably qualified person: