If a system fault is detected, the will headlamps attempt to move to the central position and remain stationary. The AFS warning lamp will illuminate to indicate that a fault is present. See 52, ADAPTIVE FRONT LIGHTING SYSTEM (AMBER).

## **HEADLAMPS - DRIVING ABROAD**

The headlamps have a beam pattern that eliminates the need to mechanically adjust the lamps or add any external stick-on decals.

To configure the High beam assist system for the side of the road on which you are driving, proceed as follows:

- Using the menu control on the steering wheel, select Vehicle Set-Up via the Instrument panel menu.
- 2. Select High Beam Assist.
- 3. Select **Drive on Left** or **Drive on Right**, for the side of the road that you are driving on.

## **HEADLAMPS - CONDENSATION**

Misting of lamp lenses can occur under some atmospheric conditions. This will not affect the performance of the lamps and will clear during normal operation.