

10. **CLIMATE** hard key: Shortcut to the Touch screen climate control menu.
 11. Temperature controls: For individual driver/passenger settings.
 12. Maximum defrost program.
 13. Maximum air conditioning (cooling) program.
 14. Heated windscreen: The heated windscreen activates for a predetermined length of time.
 15. Heated rear screen: The heated rear screen activates for a predetermined length of time.
-  Do not attach labels to the rear screen. Do not scrape or use abrasive materials to clean the inside of the rear screen.
16. Air conditioning.
 17. Air recirculation: Press for timed air recirculation. Press and hold for latched (continuous) air recirculation. To cancel air recirculation, press the button again.

Note: *Prolonged use at low temperatures may cause the windows to mist.*

18. Blower speed control: In manual mode, the current speed selection is indicated in the integrated screen on the blower speed control. To switch Climate control off, rotate fully counter-clockwise, stop and then turn counter-clockwise again.

Note: *An indicator lamp in the switch illuminates when the function is selected.*

Note: *To help keep the windows clear of ice, close the centre face-level vent and direct air flow from the outer face-level vents towards the side windows.*

Note: *The Climate control system removes moisture from the air and deposits the excess water beneath the vehicle. Puddles may form but this is normal and no cause for concern.*

Timed climate controls the optional auxiliary heater and can be set from the **Extra features** menu. See **82, SETTING TIMED CLIMATE**.

AUTOMATIC RECIRCULATION

If an Air quality sensor is fitted, the Climate control system monitors exterior air pollution and selects recirculation if it reaches a predetermined level. This feature only operates when selected from the **Settings** menu.

Recirculation sensitivity can also be changed in the **Settings** menu. See **79, AIR QUALITY SENSOR**.

Pressing the recirculation button deactivates automatic recirculation.

AIR QUALITY SENSOR

The sensitivity of the Air quality sensor can be adjusted using the Touch screen:

1. Select **Settings** from the **Climate** menu.
2. Touch the LOW, MEDIUM or HIGH soft keys on the Touch screen to select the desired sensitivity.
3. To switch Air quality sensing off, touch the OFF soft key.



The Auto recirculation icon appears on the Touch screen when the Air quality sensor is switched on.

CLIMATE SEATS

Note: *The Heated and/or Climate seats will only operate when the engine is running.*

Heated and/or Climate seats are controlled from the **Home** or **Climate** menus on the Touch screen, or by the Climate or Seat menu hard keys.

Note: *The **Front seats** menu will be displayed. If fitted, the **Rear seats** menu is also accessible.*

Heating and ventilation

If fitted, Heated rear seats (non-climate) can only be operated using the switches located on the rear of the centre console.

Heated ventilation:

- Touch the UP arrow icon to switch heated ventilation on at maximum (3 red bars).
- Touch the DOWN arrow icon once or twice to reduce the ventilation setting (2 and 1 red bars).
- Touch the DOWN arrow a third time to switch the seat ventilation off.

Cooled ventilation:

- Touch the DOWN arrow icon to switch cooled ventilation on at maximum (3 blue bars).
- Touch the UP arrow icon once or twice to reduce the ventilation setting (2 and 1 blue bars).
- Touch the UP arrow a third time to switch the seat ventilation off.

Seat zone selection:

- If fitted with Climate seats, constant selection of the **Seat zone** soft key will scroll through the three choices of seat zone; full seat, cushion, or back rest only.