

HALOGEN BULBS

Take care not to touch this type of bulb with your fingers. Always use a cloth to handle them. If necessary, clean the bulb with methylated spirits to remove any fingerprints.

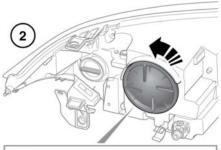

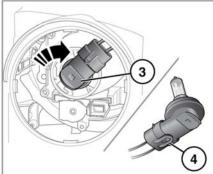

- E151046
- 1. Release the headlamp to gain access. See 223, HEADLAMP REMOVAL.
- 2. At the rear of the headlamp unit, remove the cover. Turn it counter-clockwise to release.


Note: Note the position of the locating lugs on the cover to aid refitting.

3. Rotate the bulb holder clockwise to release it from the headlamp.

Note: Note the position of the locating lugs on the bulb holder to aid refitting.

- **4.** Release the bulb from the retaining tags and remove the bulb.
- **5.** Insert the new bulb and repeat the above procedure in reverse order, for refitting.

DIRECTION INDICATOR BULB REPLACEMENT

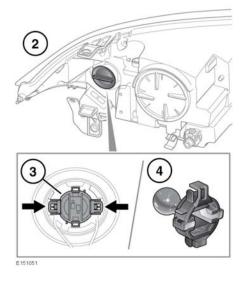

- 1. Release the headlamp to gain access. See 223, HEADLAMP REMOVAL.
- 2. Twist and lift off the cap.
- 3. Press the catches and pull the bulb holder from the unit.
- 4. Push and twist to remove the bulb.