

# Fuel and refuelling

**Note:** If the vehicle does run out of fuel, seeking qualified assistance is advisable.

## FUEL FILLER FLAP

 **Take note of all warnings and instructions given on the label, affixed to the inside of the filler flap.**

The fuel filler flap is located on the right side of the vehicle, at the rear.

1. Make sure the vehicle alarm is disarmed and the driver's door is fully unlocked. Press the left side of the flap to unlatch it.
2. Open the flap fully.
3. Twist the cap counter-clockwise to release.
4. Use the retaining clip to keep the filler cap out of the way, while fuelling.
5. After refuelling, tighten the cap until it clicks 3 times. Close the filler flap and push until it is latched shut.

## FUEL FILLER

 **When refuelling, make sure that all windows, doors and the sunroof are fully closed, particularly if young children or animals are in the vehicle.**

 **Do not attempt to fill the tank to its maximum capacity. If the vehicle is to be parked on a slope, in direct sunlight or a high ambient temperature, expansion of the fuel could cause spillage.**

 **Do not operate the auxiliary heater when refuelling the vehicle. Doing so may cause fuel vapours to combust causing a fire/explosion.**

 Check the fuel pump information carefully, to make sure that you are putting the correct fuel into the vehicle.

 If the vehicle is filled with incorrect fuel, it is essential that you seek qualified assistance, before you start the engine.

Filling station pumps are equipped with automatic cut-off sensing to avoid fuel spillage. Fill the tank until the filler nozzle automatically cuts off the supply. Do not attempt to fill the tank beyond this point.

**Note:** Filling station pumps used for diesel commercial vehicles, deliver fuel at a higher rate than normal. The higher fill rate can cause premature cut-off and may cause fuel spillage. Therefore, it is recommended that only standard light vehicle pumps are used.

## WATER IN FUEL

 If the warning **WATER IN FUEL SEE HANDBOOK** is displayed in the Message centre, an excessive amount of water has collected in the fuel filter bowl. Seek assistance from a Dealer/Authorised Repairer to have the filter drained as soon as possible.

## FUEL TANK CAPACITY

Avoid the risk of running out of fuel and never intentionally drive the vehicle when the fuel gauge indicates that the tank is empty. When refuelling your vehicle after the fuel gauge reads empty, you may not be able to add the fuel quantity shown below, as there will be a small reserve remaining in the tank.

Total tank capacity (usable): Litres (Gallons)	
V8 diesel engines	105 (23.1)
V6 petrol engines	
V8 petrol engines	
V6 diesel engines	80 (17.6)