

# Entering the vehicle

- Press and hold for 3 seconds (or press 3 times within 3 seconds) to activate the horn and the hazard lamps.
- Once active for more than 5 seconds, the alarm can be cancelled by pressing the button and holding for 3 seconds (or pressing 3 times within 3 seconds).
- The emergency alarm will also be cancelled if a valid Smart key is present when the START/STOP button is pressed.

## 5. Approach illumination:

- When approaching the vehicle during darkness, press to switch on the approach illumination. Press again to turn the approach lamps off.

**Note:** In some markets, a second press of the button will turn on the headlamps and reversing lamps. A third press will be required to turn the lamps off.

- The approach illumination period set at the factory is 30 seconds. This delay period may be configured to provide illumination lasting between 0 and 240 seconds. See **46, INSTRUMENT PANEL MENU**.
6. Emergency key access: Slide open the side cover to release, then remove.
  7. Remove the emergency key blade and unfold.
  8. If the Smart key fails to open the vehicle, insert the key blade into the slot at the base of the driver's door lock cover and gently lever the key blade upwards. Carefully rotate the door lock cover upwards, to lever the cover off the retaining clips. Insert the key blade into the exposed lock and turn to operate the lock. The alarm will sound.

**Note:** When the driver's door is unlocked using the key blade, the alarm will sound until the Smart key is positioned correctly.

**Note:** A replacement Smart key can be obtained only from a Land Rover Dealer/Authorised Repairer. The Land Rover Dealer/Authorised Repairer will require proof of identification and ownership. Notify a Land Rover Dealer/Authorised Repairer immediately if a Smart key is lost or stolen.

## 9. Keyless entry/exit:

- Exterior door handles have separate unlock and lock sensors. The unlock sensor is located on the inner surface of the handle.

## SINGLE/MULTI-POINT ENTRY

When you press the unlock button, your vehicle will unlock in one of two ways:

1. Single-Point entry: Unlocks the driver's door and the fuel filler flap only. A second press is required to unlock the remaining doors and the tailgate.
2. Multi-Point entry: Unlocks all doors, the fuel filler flap and the tailgate, on the first press.

To change from Single to Multi-Point entry (or vice versa), press both the lock and unlock buttons simultaneously for 3 seconds. The hazard warning lamps will flash twice to confirm the change.

This feature may also be set via the **Vehicle Set-Up** menu. See **46, INSTRUMENT PANEL MENU**.

**Note:** If, when the vehicle is unlocked, an audible warning is emitted, this will be a 'Mislock' error. There may be a fault with either of the alarm sensors. Consult with your Land Rover Dealer/Authorised Repairer as soon as possible.