

-  When a fuse box lid is removed, take care to protect the box from moisture and refit the lid at the earliest opportunity.
- To access the upper and lower loadspace fuse boxes, open the rear tailgate. See **8, OPENING AND CLOSING THE POWERED TAILGATE**. Remove the first access panel. Grasp the top of the panel and pull sharply. A label on the rear of the access panel shows the circuits protected and the fuse locations.
 - When refitting the access panel, make sure the locating/securing pegs are aligned with their respective holes, before pushing the panel fully home.
 - To access the passenger compartment fuse box, open the glove box. See **87, STORAGE COMPARTMENTS**. Firmly press the top of the support stay at each end and lower the glovebox into the footwell. A label on the rear of the glovebox shows the circuits protected and the fuse locations.
 - To access the engine compartment fuse box, remove the under bonnet cover. See **221, UNDER BONNET COVERS - REMOVAL**. Release the clip at each end of the fuse box cover.
 - Lightly lift up the leaf screen panel, to allow the removal of the fuse box cover.
 - Remove the fuse box cover. A label on the inside of the cover shows the circuits protected and the fuse locations.
-  If the replacement fuse blows after installation, the system should be checked by your Dealer/Authorised Repairer.
- Note:** Land Rover recommends that relays should only be replaced by qualified persons. Always switch off the ignition and the affected electrical circuit, before replacing a fuse.

CHANGING A FUSE

-  Fit Land Rover approved replacement fuses of the same rating and type or fuses of a matching specification. Using an incorrect fuse, may result in damage to the vehicle's electrical system and can result in a fire.