### Warning lamps

If the warning lamp flashes while the engine is running, reduce speed and seek qualified assistance urgently.

#### **GLOW PLUGS (AMBER)**



Illuminates when the ignition is switched on, to indicate that the glow plugs are active.

#### **BRAKE (AMBER)**



Illuminates briefly as a bulb check, when the ignition is switched on.

If the lamp illuminates after starting the engine or while driving, suspect worn brake pads or a fault with the Emergency Brake Assist (EBA) system.

The vehicle can still be driven with care but seek qualified assistance urgently.

# DYNAMIC STABILITY CONTROL (DSC) (AMBER)



Flashes when DSC is active.

If there is a fault, it will remain illuminated and the Message centre will display **DSC NOT AVAILABLE**. The vehicle can still be driven, but without DSC assistance. Seek qualified assistance as soon as possible.

# DYNAMIC STABILITY CONTROL (DSC) OFF (AMBER)



Illuminates when DSC is switched off. A chime will sound and a confirmation message will be displayed in the Message centre.

# ANTI-LOCK BRAKING SYSTEM (ABS) (AMBER)



Illuminates briefly as a bulb check, when the ignition is switched on.

If the lamp remains on or illuminates while driving, there is a fault with the ABS system. Drive with care, avoiding heavy brake application and seek qualified assistance urgently.

#### AIRBAG (AMBER)



Illuminates as a bulb check, when the ignition is switched on and extinguishes when the engine is started.

If the lamp illuminates when driving, there is a fault with the airbag system. Seek qualified assistance as soon as possible.

# ADAPTIVE FRONT LIGHTING SYSTEM (AMBER)



Illuminates when there is a system fault. The headlamps will still operate but without this feature operating correctly. Seek qualified assistance as soon as possible.

### REAR FOG LAMP (AMBER)



Illuminates when the rear fog lamps are switched on.

#### **LOW FUEL WARNING (AMBER)**



Illuminates when the fuel level is low. Refuel at the earliest opportunity.

The arrow shows which side of the vehicle to locate the fuel filler cap.