

# Starting the engine

## IF THE ENGINE FAILS TO START

**Note:** If the engine fails to crank when the engine **START/STOP** button is pressed and there has been a recent collision, seek qualified assistance.

Make sure that the brake pedal is not pressed. Switch the ignition on (see **106, SWITCHING ON THE IGNITION**) and check the Instrument panel for warning lamps and the Message centre for warning messages. See **44, INSTRUMENT PANEL**. Seek qualified assistance, if necessary.

Switch off the ignition.

To reset the alarm system, use a valid Smart key to lock and unlock the vehicle. See **4, UNLOCKING THE VEHICLE**.

**Note:** The following information applies to petrol engine vehicles only.


### If the engine persistently fails to start:

1. Make sure that a valid Smart key is inside the vehicle.
2. Press and hold the engine **START/STOP** button until the warning lamps illuminate.
3. Firmly press the brake pedal.
4. Make sure that Park (**P**) or Neutral (**N**) is selected.
5. Slowly press the accelerator pedal and hold it in the fully pressed position.
6. Press and release the engine **START/STOP** button. The engine will begin to crank.
7. Release the accelerator pedal when the engine starts.

Once the engine has started, the brake pedal can be released, if it safe to do so.

If the engine still fails to crank or start, consult a Land Rover Dealer/Authorised Repairer.

## ACTIVE EXHAUST

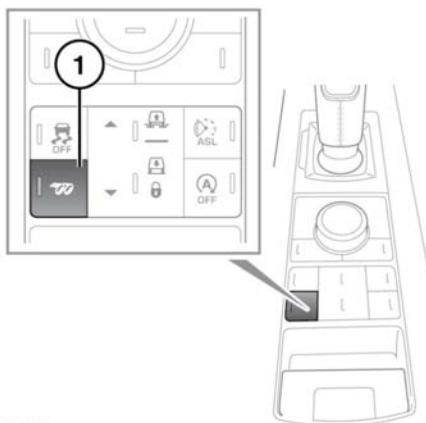

E164496

**Note:** Active exhaust is disengaged at the start of each ignition cycle.

**Note:** Active exhaust is automatically selected when the vehicle is in Dynamic mode.

When not in Dynamic mode but Active exhaust is desired, press the button to engage the Active exhaust system. The button LED illuminates to confirm.

Press the button again to disengage the Active exhaust system. The button LED extinguishes to confirm.

There are three variations to the exhaust system sound, when starting the engine.

1. **Normal start:** If the engine is started immediately after the ignition is switched on, the exhaust system operates in Dynamic mode for a few seconds. The exhaust emits a richer and louder sound while the valves close, after which, it runs in quiet mode.
2. **Start in quiet mode:** Switch the ignition on and wait for 5 seconds.

Start the engine. The engine starts and continues to run, with the exhaust in quiet mode.

- 3. Start in Dynamic mode:** Switch the ignition on.  
Press the Active exhaust button and start the engine. The engine starts and continues to run, with the exhaust system in Dynamic mode.