

rolling code device programming.....75

I

Ignition

rolling re-start.....109
switching on.....108

InControl

apps.....167
overview.....165
remote.....165
secure.....166
wi-fi connection.....166

Indicators warning lamp.....56

Information messages.....49, 53

Infotainment

connecting a media device.....155
connecting multiple devices.....158
licensing.....159
media controls.....150
pairing and connecting a device.....158
playing a portable device.....158
portable media
connections.....154
controls.....157
radio controls.....152–153
settings.....151
sound settings.....151
touch screen
care.....80
extra features.....80
operating.....80

Instrument panel.....48, 199

display units.....51
fuel range.....50
head up display.....51
lamp test.....53
menu.....49
driving features.....49
instrument display.....49
trip computer.....49
vehicle set-up.....49
trip computer.....50
trip distance.....50
warning lamps.....53

warning messages.....49

Intelligent emergency braking

ACC.....140

Intelligent stop/start

activating.....110
deactivating.....110–111

Intelligent stop/start warning lamp.....56

Interior cleaning.....198

airbag covers.....199

Interior lamps.....62

ambient lighting.....63

bulb changing.....190

bulb specification.....254

intensity.....63

types.....62

Interior locking.....16

Interior protection

temporary disabling.....15

Internet browsing

InControl connection.....166

Introduction

instructional videos.....3

ISOFIX installation.....39

J

Jump starting

connecting a starting aid.....208

connecting jump leads.....207

K

Keyless entry.....8

Keyless locking.....15

Key transmitters.....9

L

Label locations.....246

Lamps.....58

auto lamps wiper detection.....60

bulb changing.....190

bulb replacement.....194

bulb specification.....254

condensation.....60

test.....53