

REAR DIRECTION INDICATOR AND REVERSING LAMP BULB REPLACEMENT

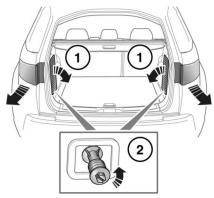

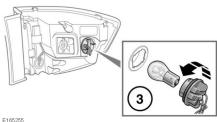


Replacing a rear direction indicator:

- Remove the appropriate loadspace vent door.
- 2. Rotate the rear lamp's retaining screw counter-clockwise, until fully released and then remove. This allows the rear lamp unit to be withdrawn.
- 3. At the back of the rear lamp unit, rotate the bulb holder counter-clockwise and pull to access the indicator bulb.

Reverse the removal procedure to install a bulb holder/bulb unit.

Note: Note the orientation of any removed components to aid refitting.

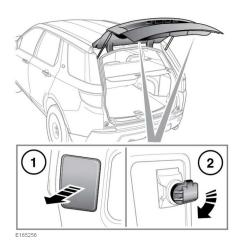

Replacing a reversing lamp bulb:

- Remove the appropriate tailgate access door.
- Rotate the bulb holder downwards. Pull to remove the holder from the lamp unit and access the reversing bulb.

Reverse the removal procedure to install a bulb holder/bulb unit.

Note: Note the orientation of any removed components to aid refitting.

WIPERS SERVICE POSITION

- To avoid damage to the bonnet, do not lift the wiper blades when they are in the normal parked position.
- When replacing the wiper blades make sure the wiper arms do not make contact with the windscreen.

Before changing a front wiper blade, the wiper arms must be set in the 'service' position as follows:

Note: The Smart key must remain in the vehicle while the wiper blades are being renewed.

1. Make sure the ignition is turned off.