

Note: The intelligent stop/start system will automatically reactivate the next time the ignition is turned on.

If the Intelligent stop/start switch is pressed while there is a fault, the message **Stop/Start Not Available** is displayed.

DRIVER EXIT

Note: The Driver exit feature is only available when Intelligent stop/start is enabled.

To prevent the vehicle from being inadvertently left in a driveable condition, the vehicle will detect when a driver is not present, and automatically turn off the ignition.

If Drive (**D**) or Sport (**S**) is selected, the Driver exit feature will turn the vehicle's ignition off if the following conditions exist:

- The driver's seat belt is unbuckled.
- The brake pedal is released.

If Neutral (**N**) or Park (**P**) is selected, the Driver exit feature will turn the vehicle's ignition off if the driver's seat belt is unbuckled.

Once the vehicle's ignition has been turned off, the vehicle can be locked. For more information, see **14, SINGLE LOCKING**.