
AM/FM RADIO CONTROLS

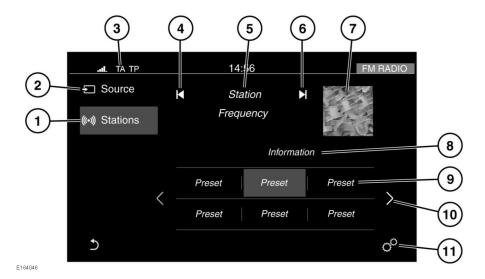

- Stations: Touch to select the Station list for the chosen radio source.
- 2. **Source**: Touch to select the media source list. See **150**, **MEDIA CONTROLS**.
- 3. Status icons: Displays TA and TP (if selected).
- **4.** Seek down: Touch to auto-seek down the frequency to the next radio station.

Note: In some markets, additional buttons are available to enable manual tuning.

- **5.** The selected station name and frequency.
- **6.** Seek up: Touch to auto-seek up the frequency to the next radio station.

Note: In some markets, additional buttons are available to enable manual tuning.

- 7. Waveband image (if available).
- 8. Information from the selected station.
- 9. Station presets:

- Touch to tune to the station stored on that preset.
- Touch and hold to store the current station on that preset.
- Use the seek buttons on the steering wheel to change to the next or previous preset station.
- **10.** Touch to scroll through the preset stations.
- 11. Touch to select the General settings menu. Select Audio and then Radio, where the following features can be activated/deactivated:
 - Manual tune.
 - Radiotext (FM only).
 - Alternative Frequency (FM only).
 - Regionalization (FM only).

Note: Settings options may vary, depending on the market.