


AM/FM RADIO CONTROLS

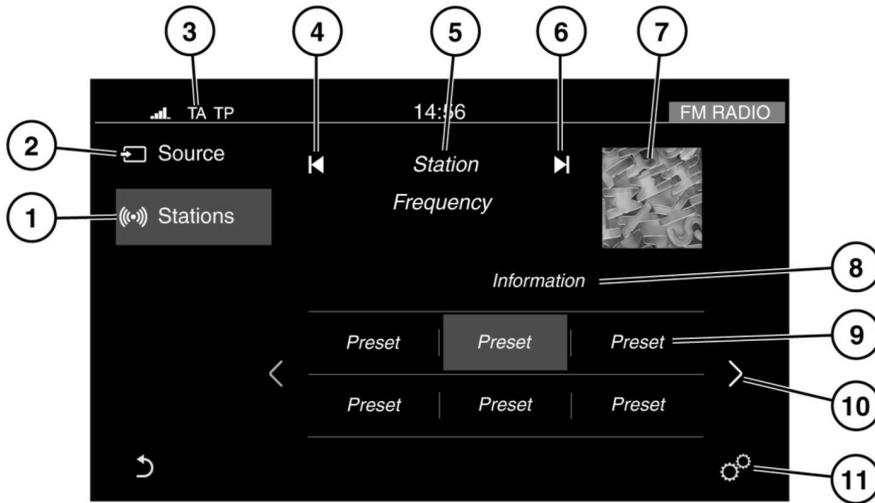

E164046

1. **Stations:** Touch to select the Station list for the chosen radio source.
2. **Source:** Touch to select the media source list. See **150, MEDIA CONTROLS**.
3. **Status icons:** Displays TA and TP (if selected).
4. **Seek down:** Touch to auto-seek down the frequency to the next radio station.
Note: In some markets, additional buttons are available to enable manual tuning.
5. The selected station name and frequency.
6. **Seek up:** Touch to auto-seek up the frequency to the next radio station.
Note: In some markets, additional buttons are available to enable manual tuning.
7. Waveband image (if available).
8. Information from the selected station.
9. Station presets:
 - Touch to tune to the station stored on that preset.
 - Touch and hold to store the current station on that preset.
 - Use the seek buttons on the steering wheel to change to the next or previous preset station.
10. Touch to scroll through the preset stations.
11. Touch to select the **General settings** menu. Select **Audio** and then **Radio**, where the following features can be activated/deactivated:
 - **Manual tune.**
 - **Radiotext** (FM only).
 - **Alternative Frequency** (FM only).
 - **Regionalization** (FM only).*Note: Settings options may vary, depending on the market.*