

E164864

Tow ball options for 7 seat vehicles with a spare wheel:

1. Quick release, detachable tow bar. See **98, FITTING THE DETACHABLE TOW BAR.**
2. Flange mounted, bolt on tow ball.
3. Receiver for hitch (drawbar). See **100, TRAILER HITCH (Australia only).**

## TRAILER STABILITY ASSIST (TSA)

When a trailer is attached, TSA will automatically detect when trailer sway is developing. It will then gradually reduce the vehicle's speed by cutting engine power and applying the brakes to help regain control.

- ⓘ TSA will not operate in the event of the trailer jack-knifing.
- ⓘ The ability of TSA may be reduced when travelling on slippery surfaces.

**Note:** TSA will not operate when Dynamic Stability Control (DSC) is switched off.

## HITCH GUIDANCE


Hitch guidance is a user selectable Touch screen feature that can aid the process of guiding the vehicle to a trailer tow hitch. Use Hitch guidance while reversing the vehicle to a trailer hitch.

Proceed as follows:

1. Select Reverse gear (R). Dependent on the vehicle's specification, the Touch screen will automatically display selectable icons or a menu list. See **130, SURROUND CAMERA SYSTEM** or see **123, REAR CAMERA.**
2. Touch the Rear camera system's **Hitch assist** icon, or for Surround camera's, tick **Hitch guidance** on the Touch screen to enable the guidance lines to be displayed.
3. Reverse the vehicle towards the trailer.
4. As the vehicle closes to within 600 mm (2 ft) of the trailer's tow hitch, an automated zoom feature is operated to enlarge the view.
5. Continue the manoeuvre carefully until the vehicle and trailer are as close as required.

## TOW ASSIST

**Note:** Trailer guidance requires a connected trailer to be fitted with a tracking target sticker, which **must** be attached according to specific instructions. Ask your Dealer/Authorised Repairer for details.

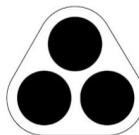

E134952

**Note:** *This feature may not operate with all trailer designs.*

Trailer guidance aids trailer reversing, by displaying guide lines on the Touch screen.

Trailer guidance becomes active when a trailer/caravan is attached to the vehicle and the trailer's electrical plug is attached to the vehicle's socket.

**Note:** *The driver's door must be opened and closed after the trailer/caravan is connected to the electrical socket, before the system will detect the connection.*

The screen will display a choice for connection. Select **YES** to move to the setup screen. Select **NO** to return to the previous screen.

**Note:** *If the connection is not detected, setup can be manually prompted by touching the Tow Assist soft key on the **Camera** menu.*

On first use, the setup screens take the user through a series of configuration options for the connected trailer. Information, such as trailer hitch length, number of axles and camera preference, is required to finalise setup. Once completed, the details are stored for future use.

When a new or existing trailer configuration is selected, Trailer guidance automatically displays on the Touch screen when Reverse gear (R) is selected. Coloured lines are displayed to indicate the predicted path of both the trailer and vehicle.