

**Note:** The vent can only be fully closed again using the thumbwheel. The vent can be closed, regardless of the position of the directional control.



Do not insert or attach items to the vents, for example, pens, air fresheners, etc..



Do not use excessive force while operating the vent control or the thumb wheel.

## HEATED SEATS

**Note:** Heated seats consume a great amount of battery power. They will only operate when the engine is running.

*If the Heated seat/s are operating when the ECO program is selected, the Heated seat/s will switch off automatically. The Heated seat/s can be switched on again, but this may affect the vehicle's fuel economy.*

### Front Heated Seats

Press the relevant Heated front seat button to switch the required Heater seat on at the maximum setting; the 3 LED indicators in the button illuminate.

Press a second time to set the Heated front seat at the medium setting; 2 LED indicators illuminate.

Press a third time to set the Heated front seat at the lowest setting; 1 LED indicator illuminates.

Press a fourth time to switch off.

### Rear Heated Seats

If fitted, the Heated rear seats (non-climate) are operated using the switches located on the rear of the centre console.

Press the relevant Heated rear seat button to switch the required Heated seat on at the maximum setting; the 3 LED indicators in the button illuminate.

Press a second time to set the Heated rear seat at the medium setting; 2 LED indicators illuminate.

Press a third time to set the Heated rear seat at the lowest setting; 1 LED indicator illuminates.

Press a fourth time to switch off.

## CLIMATE SEATS

**Note:** The Climate seats will only operate when the engine is running.

*If the Climate seat/s are operating when the ECO program is selected, the Climate seat/s will switch off automatically. The Climate seat/s can be switched on again, but this may affect the vehicle's fuel economy.*

Press the relevant Climate front seat button to enable. A pop-up menu will appear on the Touch screen.

### Heated ventilation

- Touch the up arrow icon to switch heated ventilation on at the maximum setting (3 red bars).
- Touch the down arrow icon once or twice to reduce the ventilation setting (2 and 1 red bars).
- Touch the down arrow icon a third time to switch seat ventilation off.

### Cooled ventilation

- Touch the down arrow icon to switch cooled ventilation on at the maximum setting (3 blue bars).
- Touch the up arrow icon once or twice to reduce the ventilation setting (2 and 1 blue bars).
- Touch the up arrow icon a third time to switch seat ventilation off.