
 
## Parking aids

## **REVERSE TRAFFIC DETECTION**

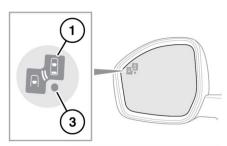



E164901

The Reverse Traffic Detection (RTD) system is a supplement to, not a replacement for, safe driving, good observation and use of the exterior and rear-view mirrors.

**Note:** RTD is automatically disabled when a trailer is connected and when Park assist is active.

In addition to the functionality provided by the rear view camera, the RTD system provides a warning to the driver of any moving vehicle, at either side, that may pose an accident risk during a reversing manoeuvre.

An amber warning icon (1) will flash in the relevant exterior mirror and an audible warning will be emitted to indicate the presence of a moving vehicle. The rear view camera screen or the parking aid screen will also show a warning icon (2) on the relevant side(s) of the screen. To switch between the rear view camera and the parking aid screen, touch the camera image or the **Cameras** icon accordingly. The system can be enabled or disabled via the Instrument panel menu. See **49**, **INSTRUMENT PANEL MENU**. When RTD is disabled, an amber dot **(3)** will be displayed in both exterior mirrors.

## REVERSE TRAFFIC DETECTION SENSORS

The RTD system will automatically disable if any of the sensors become partially or completely obscured. The amber warning indicator dot will illuminate in the exterior mirrors and the message **Reverse Traffic Sensor Blocked** appears in the Message centre.

Check that there is nothing obscuring the rear bumper and it is clear from ice, frost, snow, mud and dirt.

If a fault with a radar sensor is detected, an amber warning indicator dot will illuminate in the exterior mirrors and the message **Reverse Traffic Detection System Not Available** is displayed in the Message centre.

**Note:** Even if the detected fault only affects the radar sensor on 1 side of the vehicle, the whole system is disabled. If the fault is temporary, the system will operate correctly once the engine has been switched off and then on again.

If a fault occurs, consult a Dealer/Authorised Repairer.