


TOUCH SCREEN CONTROLS

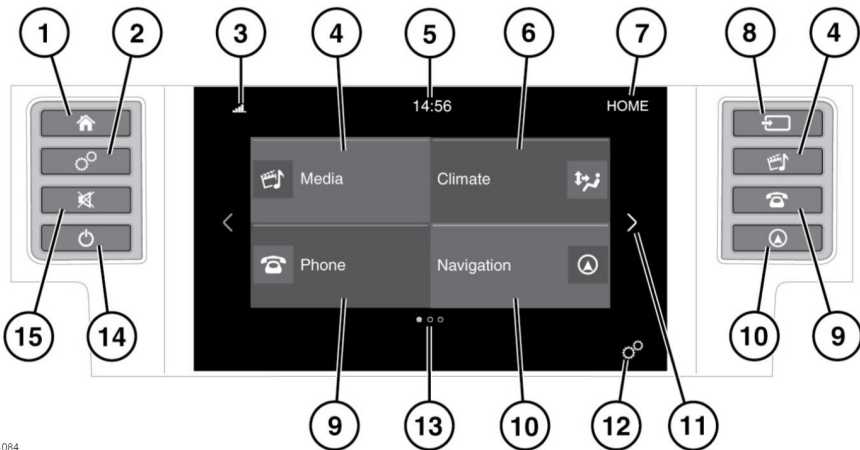

E164084



Do not adjust the Touch screen controls, or allow the system to distract the driver, while the vehicle is moving.



Always run the engine during prolonged use of the Touch screen. Failure to do so may discharge the vehicle's battery; preventing the engine from starting.



Avoid spilling or splashing liquids onto the Touch screen.

Note: The Touch screen display and the number of pages will vary, depending on the specification of the vehicle.

1. Press to select the **HOME** menu screen.
2. Press to select the **General settings** menu screen, see **80, GENERAL SETTINGS**, or if Park assist is fitted, see **126, PARK ASSIST**.
3. Status icons: When a phone is connected, the battery level and network signal strength is displayed. Also, when selected, TA (Traffic announcements).
4. Touch the screen or press the button, to select the **Media** system; or if the Media system is already switched on, touch to select the current media source menu.
Note: When the system is active, current information for the media being played is displayed.
5. Clock: The clock can be adjusted via the **System** option, in the **General settings** menu.
6. Touch to select the **Climate** system. See **83, AUTOMATIC CLIMATE CONTROL**.
7. Screen title.
8. Touch to select the audio source.
9. Touch the screen or press the button, to select the **Telephone** system. See **163, TELEPHONE SYSTEM OVERVIEW**.
10. Touch the screen or press the button, to select the **Navigation** system. The current destination route, or the **NAV MENU** screen will be displayed. See **169, THE NAVIGATION SYSTEM**.