


## TOW BAR DIMENSIONS AND MOUNTING POINTS

5 seat vehicles and 7 seat vehicles without a spare wheel

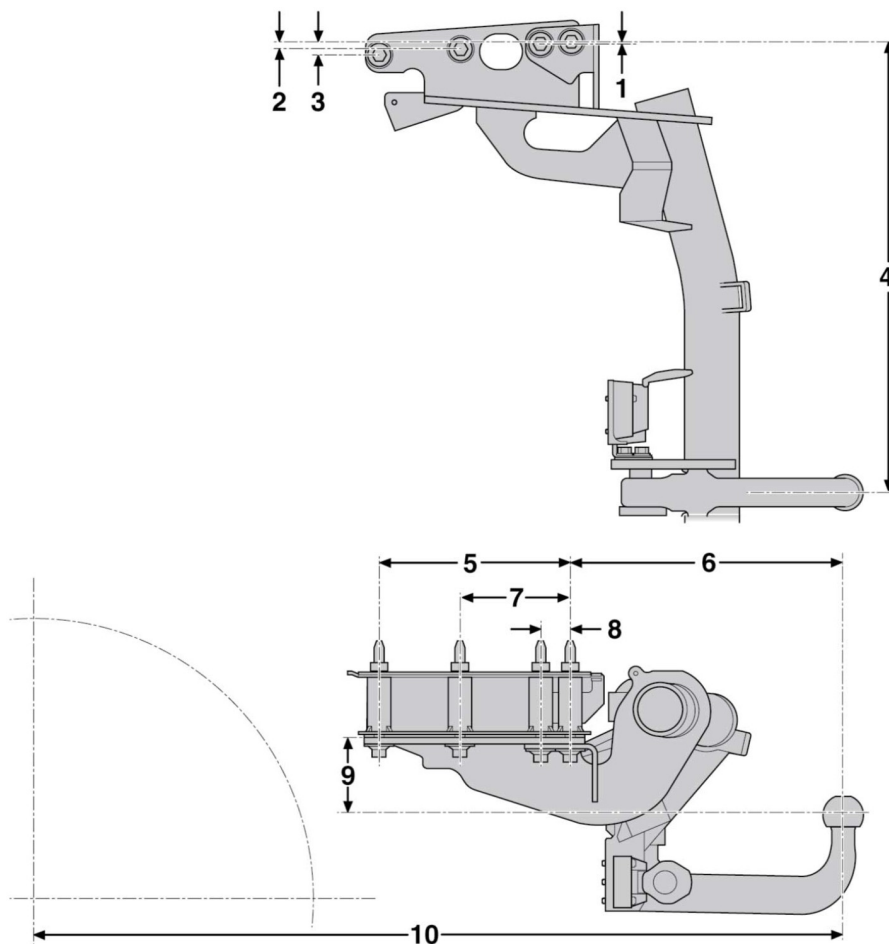

E164865


Ref.	Dimension	Millimetres	Inches
1	Fixing points	3	0.1
2	Fixing points	10	0.4
3	Fixing points	17	0.7

Ref.	Dimension	Millimetres	Inches
4	Fixing point to the centre of the tow ball	573	22.6
5	Fixing points	245	9.6
6	Centre of tow ball to fixing point	348	13.7
7	Fixing points	142	5.6
8	Fixing points	40	1.6
9	Centre of tow ball to tow bar attachment	101	4
10	Wheel centre to the centre of the tow ball	1029	40.5

**Note:** Dimensions refer to towing equipment officially released by Land Rover.

# Towing

## 7 seat vehicles with a spare wheel

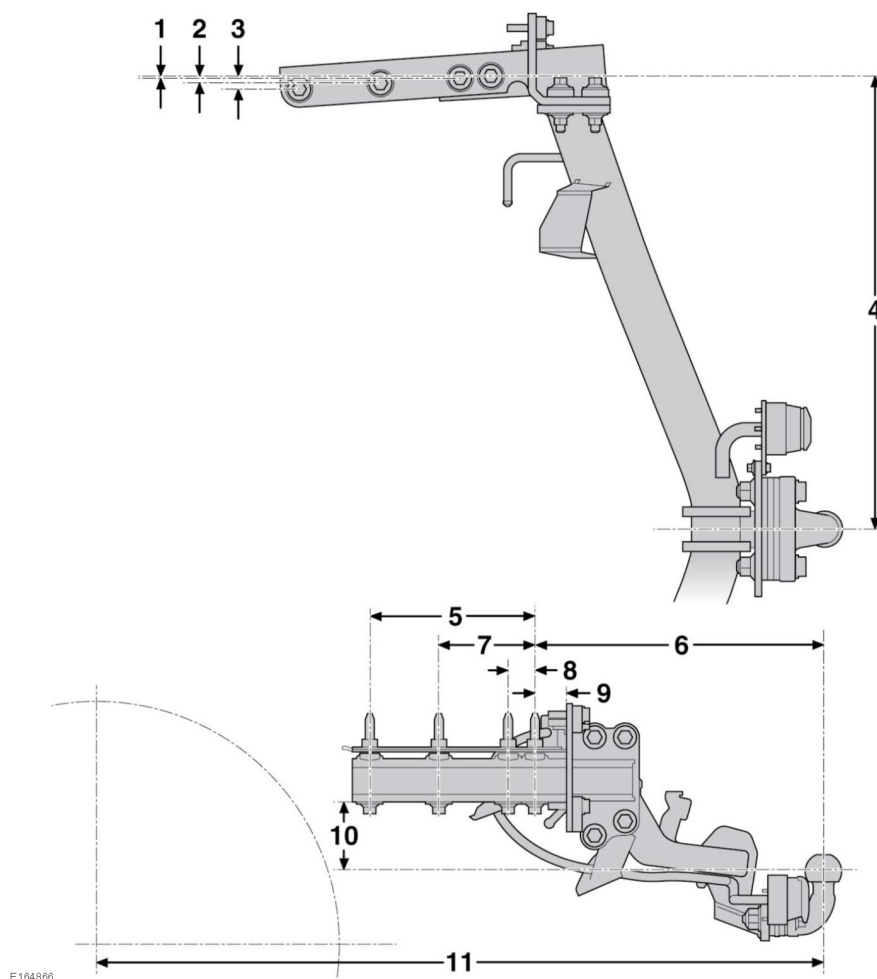

E164866

Ref.	Dimension	Millimetres	Inches
1	Fixing points	3	0.1
2	Fixing points	10	0.4
3	Fixing points	17	0.7

Ref.	Dimension	Millimetres	Inches
4	Fixing point to the centre of the tow ball	573	22.5
5	Fixing points	244	9.6
6	Centre of tow ball to fixing point	423	16.6
7	Fixing points	142	5.6
8	Fixing points	40	1.6
9	Fixing points	47	1.8
10	Centre of tow ball to tow bar attachment	101	4
11	Wheel centre to the centre of the tow ball	1104	43.5

**Note:** Dimensions refer to towing equipment officially released by Land Rover.