

Instrument panel

TRIP COMPUTER

The computer memory stores data for a journey, or series of journeys, until it is reset to zero.

There are 3 trip memories available, **A**, **B** and **Auto**. You can specify which trip memory is viewable, using the Instrument panel menu.

USING THE TRIP COMPUTER



E 150760

A short press (one second or less) or a series of short presses of the **i** button will change the trip computer display. The options available are:

- Date and Odometer.
- Trip distance.
- Trip average speed.
- Trip average fuel consumption.
- Instantaneous (short term average) fuel consumption.
- Range available from remaining fuel.
- ECO program instantaneous driving style rating. This will automatically be displayed when ECO program is selected, see **141**, **ECO PROGRAM**.
- Blank display.

Note: *These options can be enabled/disabled via the Instrument panel menu (Select **Trip Computer** and then **Trip content**), except for the ECO data system status display and the Date and Odometer options.*

To reset the trip computer values to zero, press and hold the **i** button for 2 seconds.

To reset the fuel consumption value, press and hold the button until the display clears.

The distance, average speed and average fuel economy values for trip **A** and trip **B** can be reset. Set the trip computer display to show the trip that you wish to reset, then press and hold the **i** button until the message **Resetting trip** is displayed.

It is not possible to manually reset the **Auto** trip memory. This resets automatically each time the ignition is switched on.

Trips may be added together, to record a continuous journey, or removed. Press the button for longer than one second, when **Auto** trip memory values for distance, average speed and average fuel economy are displayed, then **Adding last journey** or **Removing last journey** will appear on the screen. Press the button for longer than one second, and the previous trip information will be added to, or removed from, the current trip and the new total will be displayed. There is no limit to the number of times this can be done before the ignition is switched off.

TRIP DISTANCE

Distance travelled since the last memory reset. The maximum trip reading is 9999.9 (kilometres or miles). The computer will automatically reset to zero if this distance is exceeded.

RANGE

This shows the predicted distance (kilometres or miles) that the vehicle should travel on the remaining fuel, assuming fuel consumption and driving style remain constant.