


Interior lights

INTERIOR LIGHTS

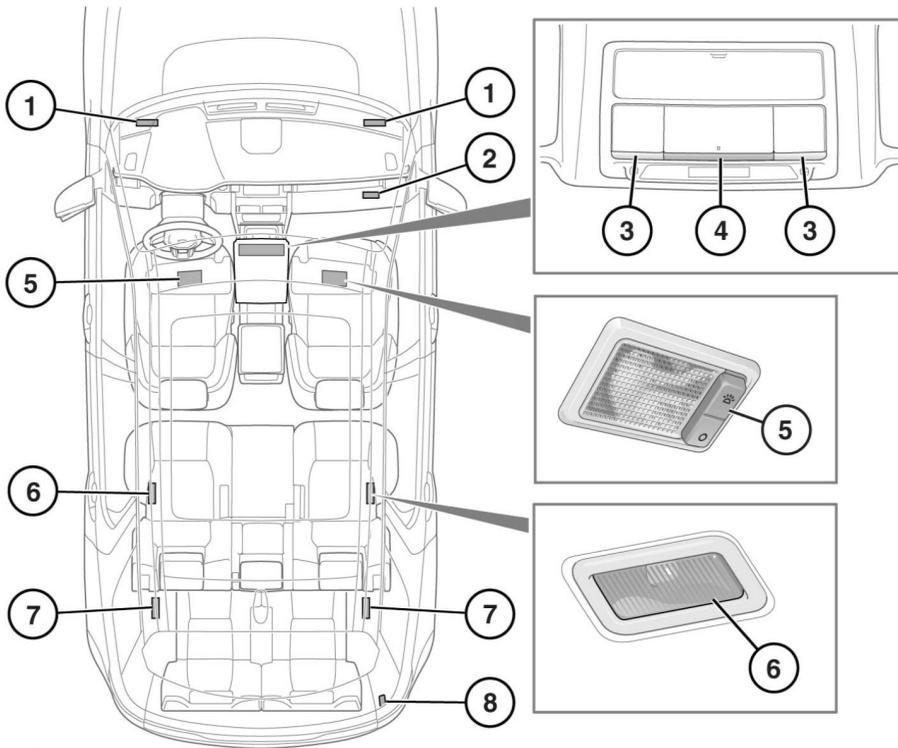

E163010

1. Footwell lamps: Illuminate when the doors are unlocked and extinguish 60 seconds after all of the doors are closed, when the engine starts or when the vehicle is locked.
2. Glovebox lamp: Illuminates when the glovebox is opened.
3. Map reading lamps: Move a finger close to (or touch) the relevant lens to switch on/off.
4. Front interior lamp: Illuminates when the doors are unlocked and extinguishes 60 seconds after all of the doors are closed, when the engine starts or when the vehicle is locked. Move a finger close to (or touch) the lens to switch on and off manually. Touch the lens for 2 seconds to deactivate/activate automatic illumination.
Note: If you are wearing gloves, it may be necessary to touch the lens to operate the lamps.
5. Sun visor lamps: Press the switch to turn on and off.