


## INTERIOR LIGHTS

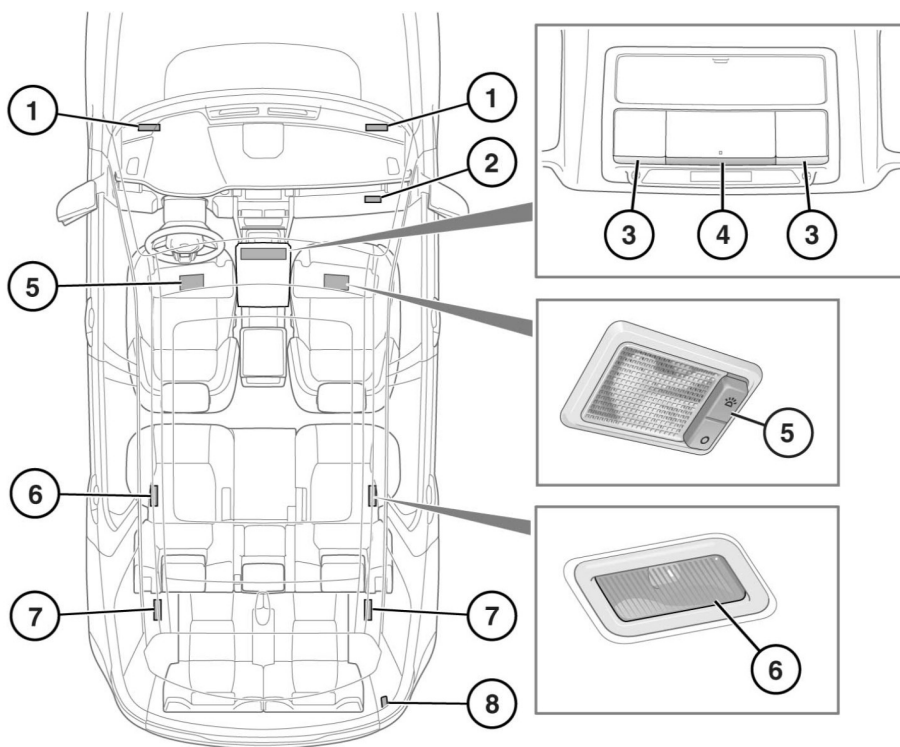

E163010

- 1. Footwell lamps:** Illuminate when the doors are unlocked and extinguish 60 seconds after all of the doors are closed, when the engine starts or when the vehicle is locked.
- 2. Glovebox lamp:** Illuminates when the glovebox is opened.
- 3. Map reading lamps:** Move a finger close to (or touch) the relevant lens to switch on/off.
- 4. Front interior lamp:** Illuminates when the doors are unlocked and extinguishes 60 seconds after all of the doors are closed, when the engine starts or when the vehicle is locked. Move a finger close to (or touch) the lens to switch on and off manually. Touch the lens for 2 seconds to deactivate/activate automatic illumination.  
**Note:** If you are wearing gloves, it may be necessary to touch the lens to operate the lamps.
- 5. Sun visor lamps:** Press the switch to turn on and off.