

IF THE SELECTOR FAILS TO ELEVATE


If the drive selector is obstructed, remove the obstruction and then start the engine. The selector should elevate as normal.

If the selector still fails to elevate, even if there is no obstruction, a fault in the system is indicated. The selector can still be used in the lowered position. Make sure **P** is selected before engine switch off. Have the fault rectified at the earliest opportunity.

TRANSMISSION FAULT

In the event that the transmission develops a fault, a warning message may be displayed in the Message centre and only limited gears may become available. You should seek qualified assistance immediately.

MANUAL TRANSMISSION

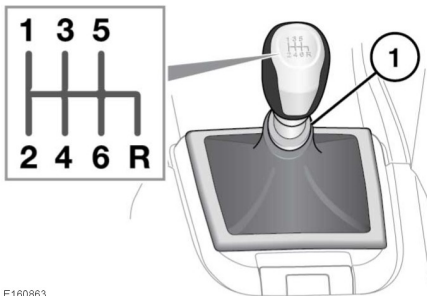

Lift the collar (1) when selecting Reverse (**R**) gear.



Never attempt to engage Reverse (**R**) gear while the vehicle is in forward motion. This may result in serious transmission damage and costly repairs.

A gear shift indicator warning lamp will illuminate briefly at the recommended (up-shift) gear change point. See **56, GEAR SHIFT (GREEN)**.