

In the event of a bulb failure, it should be noted that some bulbs are renewable only by a Dealer/Authorised Repairer. See **190, CHANGING A BULB**.

**Instructional video - Auto lamps.**



E108653

## DAYTIME RUNNING LAMPS

The Daytime running lamps are LED lamps.

With the lighting control in the OFF position or in the AUTO position, while the lighting conditions do not require the headlamps to be on, then the Daytime running lamps will switch on automatically under the following conditions:

- The engine is running.
- The gear selector is out of Park (P) (automatic transmission).
- The Electric Parking Brake (EPB) is not applied - market dependent.



Unless required or prohibited by law, the Daytime running lamps feature can be disabled or enabled by a Dealer/Authorised Repairer.

## HEADLAMP COURTESY DELAY

This feature operates whenever the lighting control is in the AUTO (5) position and the ignition is turned off. The headlamps will remain illuminated for up to 240 seconds.

**Note:** *The time delay may be changed via the **Vehicle Set-up** menu. See **49, INSTRUMENT PANEL MENU**.*

The Courtesy delay can be switched off at any time, by pressing the headlamp button on the Smart key.

## AUTO HIGH BEAM

This feature of the Xenon lighting automatically selects and deselects the high beam, under specific conditions of road lighting and in the absence of other vehicle's lights. The system is only active when the ambient light drops below a predetermined level.

**Note:** *It is not recommended that Auto high beam is used while driving off road.*

For Auto high beam to become operational, the lighting control must be in the **AUTO** position (5), with dipped beam headlamps selected.

The Instrument panel warning lamp illuminates when Auto high beam is selected. See **56, AUTO HIGH BEAM (GREEN)**.

Auto high beam will activate only when the vehicle's speed exceeds 40 km/h (25 mph). The system will deactivate when the vehicle's speed drops below 24 km/h (15 mph).

To manually select high beam, move the control to the high beam position, as normal. To return to Auto high beam, move the control back to the central position.

To manually override to dipped beam from high beam, pull the control to the flash position (2) and Auto high beam will be cancelled. To return to Auto high beam, push the control to the high beam position (1) and then return it to the central position.

To turn off Auto high beam, turn the lighting control from **AUTO** to headlamps.

This feature can be disabled/enabled via the **Vehicle Set-up** menu. See **49, INSTRUMENT PANEL MENU**.

The following may affect the operation of Auto high beam:

- Highly reflective road signs.
- Dimly lit road users, for example, cyclists or pedestrians.