


## MAIN MENU

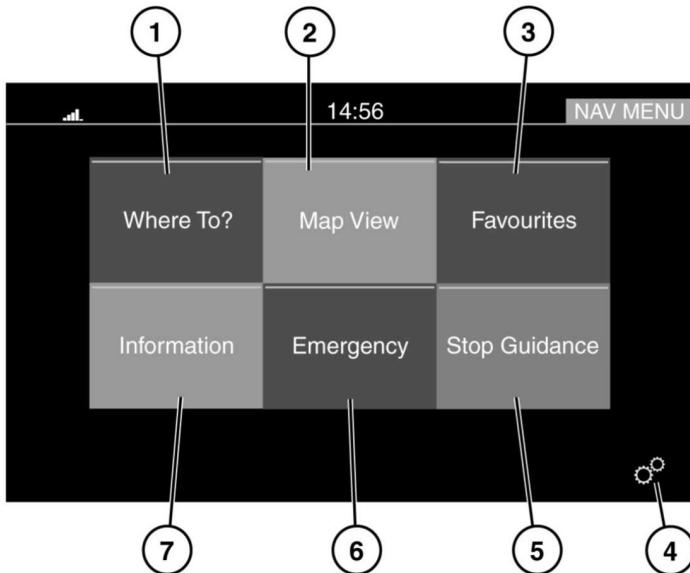

E166331

- 1. Where To?:** Touch for a list of options for setting a destination. See **173, WHERE TO?**.
- 2. Map View:** Touch to view the map screen.
- 3. Favourites:** Touch to view the list of stored destinations.
- 4. Settings:** Touch to view the **General settings** or **Navigation** menu. See **172, SETTINGS**.
- 5. Stop Guidance:** Touch to cancel the current route guidance.
- 6. Emergency:** Touch to see a list of emergency services. See **174, EMERGENCY**.
- 7. Information:** Touch to display the following: **Traffic, Where am I, and Trip computer**.