

THE NAVIGATION SYSTEM

Navigation instruction is by map and turn information displayed on the Touch screen and can be complemented by voice guidance, if required. The system uses signals from Global Positioning System (GPS) satellites, combined with information from vehicle sensors and from data stored on the SD card, to establish the true position of the vehicle.

Using this combination of data sources, the vehicle's navigation computer enables you to plan and follow a route map to your desired destination.

The Touch screen is used to control navigation via menus, text screens and map displays.



Operate the system only when it is safe to do so.

Note: The Navigation system fitted to your vehicle does not support speed camera alerts.

The requirements of national Road Traffic Regulations always apply.

Observation of traffic signs and local traffic regulations always take priority.

The Navigation system serves solely as an aid to navigation. In particular, the Navigation system cannot be used as an aid to orientation when visibility is poor.

GPS signals may occasionally be interrupted due to physical barriers, such as tunnels and roads, under raised highways.


However, direction and speed sensors on the vehicle will minimise any adverse effect on the Navigation system. Normal operation will resume once the obstruction has been passed.

Under certain conditions, it is possible for the vehicle's position shown on the screen to be incorrect. This may happen when:

- Driving on a spiral ramp in a building.
- Driving on, or beneath, elevated roads.

- 2 roads are close and parallel.
- The vehicle has been transported to another destination.
- The vehicle has been rotated on a turntable.
- The vehicle's battery has been disconnected.

NAVIGATION SD CARD

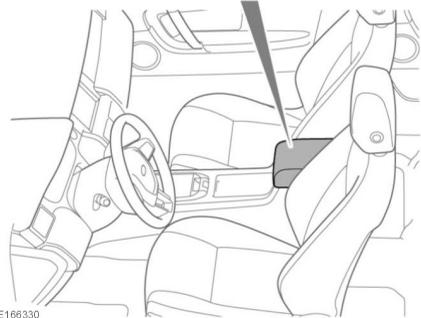

The Navigation SD card reader is located in the front centre cubby box. Make sure the SD card is located correctly in the card reader before operating the Navigation system.

For updates to the Navigation system's maps, visit www.landrover.com/map-updates/incontrol-touch/, or contact your Land Rover Dealer.

Note: If for any reason the SD card is ejected while the Navigation system is in operation, the Navigation system will not operate until the vehicle's ignition is switched off and the vehicle is restarted.