Touch screen

- Cameras, see 130, SURROUND CAMERA SYSTEM.
- ECO Data: The ECO Data system is designed to help the driver maximise fuel economy by providing on-screen vehicle data. Touch to select the ECO Data home screen. See 141, ECO PROGRAM.
- Valet mode, see 81, SELECTING VALET MODE.
- Ambient lighting: When selected, the ambient lighting in the vehicle can be changed.
- Wade sensing: When selected, this screen provides information for the driver while wading through water. See 146, WADE SENSING CONTROLS.
- 4 x 4i: When selected, this provides information for off-road driving.
- WiFi hotspot, see 166, INCONTROL WI-FI.
- Screen off: Touch to turn the screen off.

Note: The number of Extra features will vary, depending on the specification of the vehicle.

SELECTING VALET MODE

Valet mode allows the vehicle to be driven and locked by a parking attendant, without giving access to the loadspace. Valet mode also prevents operation of the Touch screen, to prevent access to telephone numbers or navigation addresses.

Each time Valet mode is used, a Personal Identification Number (PIN) must be entered.

- 1. Touch Valet mode in Extra features.
- 2. Enter a memorable 4-digit PIN. You will be prompted to confirm the PIN. If you wish to cancel the PIN, select **Delete**. If the PIN is cancelled, or incorrectly entered, you will be prompted to enter the PIN again.

3. Valet mode activated is displayed to indicate that the PIN has been accepted.

The loadspace is now securely locked in Valet mode and the **Valet mode On** screen is displayed.

DESELECTING VALET MODE

- When you re-enter the vehicle, select Valet mode in Extra features.
- 2. Enter your memorable 4-digit PIN and touch the **OK** soft key.

Valet mode deactivated is displayed to indicate that the PIN has been accepted.

- The loadspace will return to the previously set security requirement.
- The Touch screen will be enabled.

Note: If the PIN is forgotten, Valet mode can only be deactivated by a Dealer/Authorised Repairer.