

# Vehicle battery

**Note:** Refer to the donor vehicle's handbook for the recommended negative boost terminal.

4. Connect the other end of the negative (Black) jump lead to the earth point on the disabled vehicle (as illustrated).

**Note:** Check that all cables are clear of any moving components and that all 4 connections are secure.

5. Start the engine of the donor vehicle and allow it to idle for a few minutes.
6. Start the engine of the disabled vehicle.

**Note:** Do not switch on any electrical circuits of the disabled vehicle until after the jump leads are removed.

7. Allow both vehicles to idle for 2 minutes.
8. Switch off the donor vehicle.
9. Disconnect the negative (Black) jump lead from the previously disabled vehicle.
10. Disconnect the negative (Black) jump lead from the donor vehicle.
11. Disconnect the positive (Red) jump lead from the previously discharged battery.
12. Disconnect the positive (Red) jump lead from the donor vehicle.

## CONNECTING A STARTING AID

To start the vehicle using a starting aid or a slave battery, follow the instructions in the sequence given:

1. Connect the positive (Red) jump lead to the positive (+) battery terminal of the discharged battery.
2. Connect the negative (Black) jump lead to the vehicle's earth point.
3. Switch on the starting aid.
4. Start the engine and allow it to idle.

5. Disconnect the negative (Black) jump lead from the battery terminal of the vehicle.
6. Switch off the starting aid.
7. Disconnect the positive (Red) jump lead from the battery terminal of the vehicle.

## REMOVING THE VEHICLE BATTERY

Special tools are required to refit the battery after removal, therefore battery removal and refit should be carried out only by qualified personnel. Consult your Dealer/Authorised Repairer.

## CHARGING THE VEHICLE BATTERY

If the vehicle's battery should require charging, the battery must be removed from the vehicle. Consult your Dealer/Authorised Repairer.



Battery disconnection, removal and renewal should be carried out only by qualified personnel. Consult your Dealer/Authorised Repairer.



Used batteries must be disposed of correctly as they contain a number of harmful substances. Seek advice on disposal from your Dealer/Authorised Repairer and/or your local authority.

## REPLACING THE VEHICLE BATTERY

If the vehicle's battery should require replacing, the battery must be removed from the vehicle. Consult your Dealer/Authorised Repairer.



Battery disconnection, removal and renewal should be carried out only by qualified personnel. Consult your Dealer/Authorised Repairer.