


## MANUAL CLIMATE CONTROL

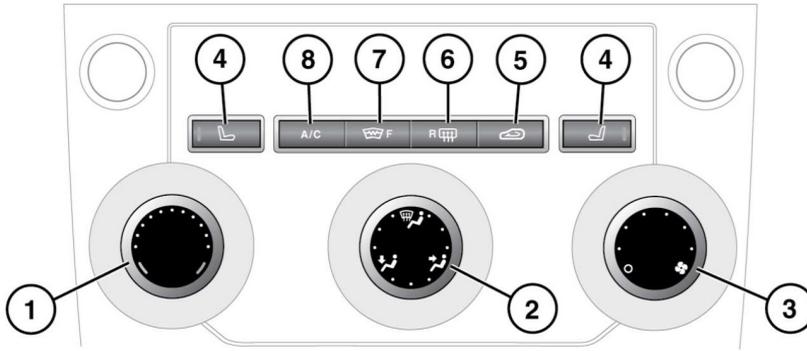

E162149

**Note:** When Eco Program is selected heating and ventilation settings are automatically adjusted to reduce energy consumption. See **141, ECO PROGRAM.**

1. Temperature control, rotate to adjust.
2. Air distribution: Rotate to direct air flow to the required areas.
3. Blower speed: Rotate to adjust air flow speed through the vents.
4. Seat heaters: Press once to turn on high, twice to turn on medium, and a third time to turn on low. Press a fourth time to turn off.
5. Recirculation:
  - Press briefly to turn on recirculation for 4 minutes.
  - Press and hold to turn on continuous recirculation.
  - When recirculation is in operation, press briefly to turn off.
6. Heated rear screen: Press to switch on/off.
7. Heated windscreen: Press to switch on/off.
8. Air conditioning: Press to switch on/off.

**Note:** The amber tell-tale indicators in the switches will illuminate when the function is selected.

**Note:** In low temperatures, it is advisable to close the centre face-level vents, and direct air flow from the outer face-level vents towards the side windows. This will help to keep the windows clear of ice.