
## Heating and ventilation

## MANUAL CLIMATE CONTROL

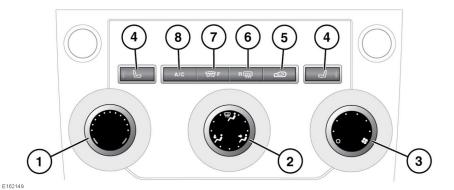

**Note:** When Eco Program is selected heating and ventilation settings are automatically adjusted to reduce energy consumption. See

## 141, ECO PROGRAM.

- 1. Temperature control, rotate to adjust.
- **2.** Air distribution: Rotate to direct air flow to the required areas.
- **3.** Blower speed: Rotate to adjust air flow speed through the vents.
- Seat heaters: Press once to turn on high, twice to turn on medium, and a third time to turn on low. Press a forth time to turn off.

## 5. Recirculation:

- Press briefly to turn on recirculation for 4 minutes.
- Press and hold to turn on continuous recirculation.
- When recirculation is in operation, press briefly to turn off.
- **6.** Heated rear screen: Press to switch on/off.
- 7. Heated windscreen: Press to switch on/off.
- **8.** Air conditioning: Press to switch on/off.

**Note:** The amber tell-tale indicators in the switches will illuminate when the function is selected.

**Note:** In low temperatures, it is advisable to close the centre face-level vents, and direct air flow from the outer face-level vents towards the side windows. This will help to keep the windows clear of ice.