

**Note:** Make sure that the tool is fully engaged in to the transmission casing. Incorrect location of the tool may cause damage to the vehicle, and may cause the vehicle to return to the Park (P) position.

When the transmission park release mechanism is activated, the gear selector will remain in **P**, but the selector indicator and the Instrument panel will both display a flashing **N**.

When vehicle transportation has been completed, the Transmission park release mechanism will need to be deactivated. To deactivate the Transmission park release mechanism, reverse the steps above.

### OFF-ROAD RECOVERY



**If the towing eyes are to be used for off-road recovery, it is essential that off-road driver training, covering recovery techniques, is undertaken.**

Further information on off-road driver training can be found at:

**[www.landroverexperience.com](http://www.landroverexperience.com).**