

WHEEL CHANGING SAFETY


Before raising the vehicle or changing a wheel, make sure you read and comply with the following warnings:

-  **Always find a safe place to stop, off the highway and away from traffic.**
-  **Make sure the vehicle is on firm, level ground.**
-  **Apply the parking brake. Engage Park (P) on automatic vehicles; select first or reverse gear on manual vehicles.**
-  **Switch on the hazard warning lamps.**
-  **Make sure the front wheels are in the straight ahead position and engage the steering lock.**
-  **Disconnect a trailer/caravan from the vehicle.**
-  **Make sure all passengers, and animals, are out of the vehicle and in a safe place away from the highway.**
-  **Place a warning triangle at a suitable distance behind the vehicle, facing towards oncoming traffic.**

TOOL KIT

5 seat vehicles

Lift the loadspace floor to access the temporary use spare wheel and tool kit.

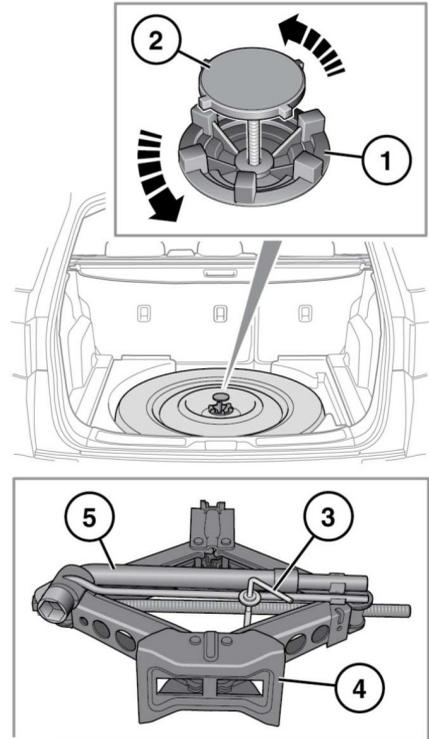

E164 296

1. Temporary use spare wheel locking ring.
2. Temporary use spare wheel retaining bolt.
3. Tool kit retaining bolt.
4. Jack.
5. Wheel brace.

-  **Secure the spare wheel, or the removed wheel, in the correct position using the retaining bolt.**