

**Note:** The Smart key may not be detected if it is placed within a metal container, or if it is shielded by a device with a back-lit LCD screen, such as a smart phone, laptop (including when inside a laptop bag), games console, etc. Keep the Smart key clear of such devices when attempting Keyless entry or Keyless starting.

**Note:** The Smart key needs only to be on the driver's person, or in a non-metallic bag or briefcase. It does not need to be exposed or handled.

To enter the vehicle, just pull the door handle. The alarm will be disarmed and the doors unlocked according to the current unlock/entry setting (Single or Multi-point). The hazard warning lamps will flash twice as 'unlock' confirmation. Power-folded mirrors will fold out (if enabled).

**Note:** If Single-point entry is the current security setting and a door other than the driver's door is opened first, all of the doors will unlock.

**Instructional video - Keyless entry.**



E168649

## CONVENIENCE MODE

When the door is opened using either the Smart key or Keyless entry, the vehicle's electrical system initiates the Convenience mode. The following systems become functional:

- Driver position memory.
- Seat and steering column adjustment.
- Interior and exterior lighting.
- Message centre.
- Auxiliary power socket.

## SMART KEY SYSTEM TRANSMITTERS



Any person fitted with an implanted medical device should make sure the device is kept at a distance of at least 22 cm (8.7 in) away from any transmitter mounted in the vehicle. This is to avoid any possibility of interference between the system and device. See 255, **SMART KEY TRANSMITTER LOCATIONS**.

## STEERING COLUMN LOCK



During vehicle recovery, a Smart key must remain inside the vehicle, so that the steering column remains unlocked. See 240, **RECOVERY METHOD**.

Your vehicle is fitted with an electronic steering column lock, which locks and unlocks in conjunction with the vehicle's locking system. It also locks automatically, after a time delay, if the ignition is switched off and the Smart key is removed from the vehicle.

Any malfunction of the steering column lock will be indicated by the message **Steering Column Locked** being displayed in the Message centre. If this occurs:

1. Lock and then unlock the vehicle using the Smart key.
2. Try again to unlock the steering column lock, by turning the steering wheel gently to the left and right.
3. If the problem persists, seek qualified assistance immediately.

## DRIVE-AWAY LOCKING

Drive-away locking automatically locks all of the doors when the vehicle reaches a set speed. This feature can be enabled/disabled via **Drive-away locking** in the **Vehicle Set-up** menu. See 49, **INSTRUMENT PANEL MENU**.