

## Rear seats



E164261



To move a rear seat forward or back:

- Lift the bar at the front of the rear seat. Then slide the rear seat into the required position.
- Release the bar and make sure the rear seat is locked firmly in position.

### ACCESS POSITION (7 seat vehicle)



The vehicle must not be driven with the rear seats in the access position. Motion of the vehicle could cause the seatback to fall forwards suddenly, causing injury.

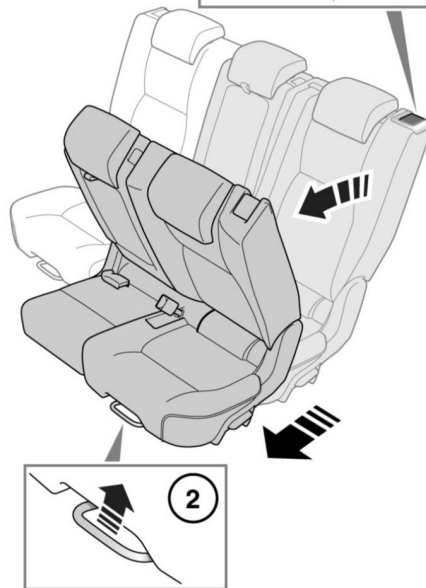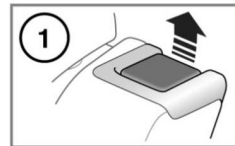

E163645

To tilt the seatback forwards: Pull the lever on the top of the seatback upwards (1) to release the locking mechanism, and then move the seatback forwards into the tilt position.

To move the seat forwards: Pull the lever on the front of the seat upwards (2) to release the locking mechanism, and then move the seat forwards.