


## Wheel changing

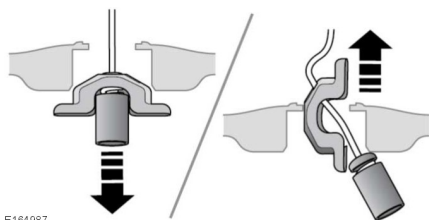

E164987

Lift the temporary spare wheel and release the winch cable by passing it through the centre of the wheel, as shown in the above graphic.

To stow the removed road wheel:

1. Remove the centre cap from the road wheel and store it in a safe place.
2. Position the road wheel underneath the rear of the vehicle, with the outer face of the road wheel facing upwards.
3. Pass the winch cable through the centre of the wheel.
4. Start to turn the winch handle clockwise to take the slack out of the cable, then make sure the cable end is seated correctly before continuing to raise the wheel.
5. Continue to rotate the winch handle until the road wheel is in the stowed position.
6. Remove the winch handle and stow all of the tools and the jack in the tool tray.

**Note:** The bumper cover cannot be refitted to the vehicle with a stowed full sized wheel.

### Operating the winch without a road wheel attached

When extracting the winch cable after the winch cable has been retracted without a road wheel attached, operate the winch as follows:

Fit the winch handle to the temporary spare wheel winch and rotate counter-clockwise to extract the cable, while also applying tension by pulling on the end of the winch cable.

**Note:** If while the cable is being extracted, the winch feels tight or locks up, stop winding and wind back, at least one full turn. Apply a tension on the cable to release any cable slack, if necessary, giving it a sharp tug. Try the winch again and continue if the mechanism is free to operate. Repeat, if the winch feels tight or locks up again.



If the winch feels tight or locks up, stop winding and wind back, at least one full turn. If this fails to free the winch mechanism, do not continue, as damage may be caused to the winch.

### Refitting the bumper cover

When the temporary spare wheel is stowed underneath the vehicle, refit the bumper cover as follows:

1. Locate the 4 retaining clips on the cover into the slots in rear bumper.
2. Locate the 2 fixing points in the underside of the cover to the bumper and fasten the cover to the bumper using the fixings. Tighten the fixings with the special tool.

## IMPORTANT – USE OF SPARE TYRE



Adhere to the instructions on the temporary spare wheel warning label, affixed to the wheel. Failure to do so may cause vehicle instability and/or tyre failure.



Where fitted, the temporary spare wheel is **FOR TEMPORARY USE ONLY**. Drive with caution while the temporary spare wheel is fitted. Make sure an original size wheel and tyre are fitted as soon as possible.



Do not fit more than one temporary use spare wheel on the vehicle at any one time.