

Warning lamps

GEAR SHIFT (GREEN)



The gear shift indicator illuminates briefly at the recommended gear change point (up-shift).

The shift indicator will not illuminate while Cruise control is active and not being overridden by pressing the throttle pedal.

Note: *This warning indicator is only a guide. It remains the responsibility of the driver to operate the vehicle in an appropriate manner for the prevailing conditions.*

HILL DESCENT CONTROL (GREEN)



Illuminates continuously when Hill Descent Control (HDC) is selected and HDC operating conditions are met. See **144, HDC CONTROLS**.

If the lamp flashes, HDC has been selected, but the operating conditions are not being met or HDC fade-out is occurring.

CRUISE CONTROL (GREEN)



Illuminates when Cruise control or Adaptive Cruise Control (ACC) is active.

FORWARD ALERT (GREEN)



Illuminates when Forward alert is active.

SIDE LAMPS (GREEN)



Illuminates when the side lamps are switched on.

FRONT FOG LAMPS (GREEN)



Illuminates when the front fog lamps are switched on.

DIRECTION INDICATORS (GREEN)



The appropriate warning lamp will flash when the direction indicators are operated.

TRAILER DIRECTION INDICATORS (GREEN)



Illuminates as a bulb check when the ignition is switched on and extinguishes when the engine is started.

If a trailer is attached, the warning lamp will flash in conjunction with the direction indicator warning lamp. If the lamp fails to flash, the direction indicator bulb on the trailer may be faulty.

Note: *If the attached and connected trailer is fitted with LED lights, the bulb check may not be performed.*

AUTO HIGH BEAM (GREEN)

Illuminates when the Auto high beam feature has switched on the high beams.

INTELLIGENT STOP/START (GREEN)



Illuminates when the engine is shut down by the Intelligent stop/start system.

Note: *Other warnings normally associated with an engine shutdown, for example, the ignition warning lamp, do not illuminate during an engine shutdown by the Intelligent stop/start system.*