


PORTABLE MEDIA CONTROLS

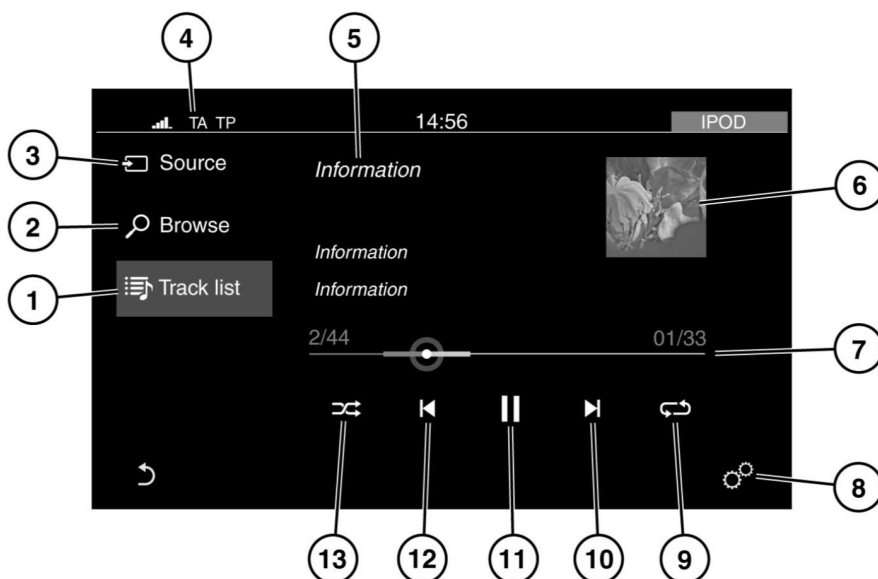

E164049

The following portable devices can be used on the Media system: **iPod**, **USB**, **AUX** and **Bluetooth®** wireless technology devices.

Note: Auxiliary devices have no Touch screen controls.

1. **Track list:** Touch to select the list of tracks from the connected device.
2. **Browse:** Touch to select the menu screen for the required music or audio source subject list for the connected device: **Playlists**, **Artists**, **Albums**, **Songs**, etc.
3. **Source:** Touch to select the media source menu screen.

Note: The media source has to be connected to the vehicle before it will appear in the media source list.

4. **Status icons:** Showing the connected phone's network, phone battery level and network signal strength, also TA and TP (if selected).
5. **Information** relating to the music or audio being played.
6. **Image display:**
 - If available, the album art for the current track being played will be displayed. The image will also appear on the Media soft key on the HOME page.
 - When a video (from a connected USB source only) is about to be played, an image from the video is displayed.
7. **Progress bar:** Drag the spot or touch the line to move forwards or backwards through the track.