

# Heating and ventilation

5. Touch to switch the Climate control system off.
6. Windscreen air distribution: Touch to switch on/off.
7. Air distribution: Touch the upper (face distribution) or lower (body/feet distribution) area to select.
8. This indicates that the Rear A/C is locked. To access the Rear A/C **lock/unlock** feature, touch **Rear A/C**.
9. **Sync**: Touch to synchronise the driver and front passenger Climate zone settings.
10. Touch to select the **General settings** menu, then to access the **Climate** settings menu.
11. Heated front seats or Climate front seats:
  - If Heaters front seats are fitted: See **85, HEATED SEATS**.
  - If Climate front seats are fitted: Press the switch to select the **Climate seats** settings menu screen. See **85, CLIMATE SEATS**.
12. Recirculation: Press for Timed recirculation (recirculation will operate for 4 mins), or press and hold for continuous recirculation. Press again to turn off.

**Note:** *Prolonged use at low temperatures may cause the windows to mist.*
13. Heated rear screen: Press to turn on/off.
14. Heated front screen: Press to turn on/off.
15. **A/C**: Press to turn the Air conditioning system on/off.
16. Temperature controls for either the driver or passenger: Rotate to change the temperature. The individual set temperature is displayed in the centre of the controls.
17. Press to turn maximum defrost for the windscreen on/off.
18. Press to select the **FRONT CLIMATE** screen.

19. Blower speed control: In manual mode, rotate to select the required fan speed for the selected zone/s. The speed selected is indicated by illuminated LEDs.
20. **AUTO**: Press to turn fully automatic mode on/off. Depending on the specification of the vehicle, the various options for AUTO mode can be set via the **CLIMATE** settings.
21. **MAX A/C**: Press to turn the maximum Air conditioning mode on/off.


**Note:** *In low temperatures, it is advisable to close the centre face-level vents, and direct air flow from the outer face-level vents towards the side windows. This will help to keep the windows clear of ice.*

**Instructional video - Climate control.**



E166655

## AIR VENT OPERATION

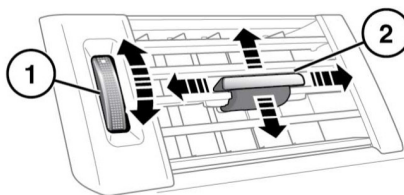

E155740

The vents can be opened using the following procedure:

1. To open the vent, rotate the thumb wheel fully upwards, from the bottom (closed) position to the (top) open position.
2. After the vent has been opened using the thumb wheel, the direction control can be used to adjust the direction of air flow.