Heating and ventilation

- **5.** Touch to switch the Climate control system off.
- **6.** Windscreen air distribution: Touch to switch on/off.
- Air distribution: Touch the upper (face distribution) or lower (body/feet distribution) area to select.
- This indicates that the Rear A/C is locked.
 To access the Rear A/C lock/unlock feature, touch Rear A/C.
- **9. Sync**: Touch to synchronise the driver and front passenger Climate zone settings.
- **10.** Touch to select the **General settings** menu, then to access the **Climate** settings menu.
- 11. Heated front seats or Climate front seats:
 - If Heaters front seats are fitted: See 85, HEATED SEATS.
 - If Climate front seats are fitted: Press the switch to select the Climate seats settings menu screen. See 85, CLIMATE SEATS.
- 12. Recirculation: Press for Timed recirculation (recirculation will operate for 4 mins), or press and hold for continuous recirculation. Press again to turn off.

Note: Prolonged use at low temperatures may cause the windows to mist.

- 13. Heated rear screen: Press to turn on/off.
- 14. Heated front screen: Press to turn on/off.
- **15.** A/C: Press to turn the Air conditioning system on/off.
- 16. Temperature controls for either the driver or passenger: Rotate to change the temperature. The individual set temperature is displayed in the centre of the controls.
- **17.** Press to turn maximum defrost for the windscreen on/off.
- 18. Press to select the FRONT CLIMATE screen.

 
- 19. Blower speed control: In manual mode, rotate to select the required fan speed for the selected zone/s. The speed selected is indicated by illuminated LEDs.
- 20. AUTO: Press to turn fully automatic mode on/off. Depending on the specification of the vehicle, the various options for AUTO mode can be set via the CLIMATE settings.
- **21. MAX A/C**: Press to turn the maximum Air conditioning mode on/off.

Note: In low temperatures, it is advisable to close the centre face-level vents, and direct air flow from the outer face-level vents towards the side windows. This will help to keep the windows clear of ice.

Instructional video - Climate control.



AIR VENT OPERATION



The vents can be opened using the following procedure:

- 1. To open the vent, rotate the thumb wheel fully upwards, from the bottom (closed) position to the (top) open position.
- After the vent has been opened using the thumb wheel, the direction control can be used to adjust the direction of air flow.