

## DYNAMIC STABILITY CONTROL (DSC) OFF (AMBER)



Illuminates when DSC is switched off. A chime will sound and a confirmation message will be displayed in the Message centre.

## ANTI-LOCK BRAKING SYSTEM (ABS) (AMBER)



Illuminates briefly as a bulb check, when the ignition is switched on.

If the lamp remains on or illuminates while driving, there is a fault with the ABS system. Drive with care, avoiding heavy brake application and seek qualified assistance urgently.

## AIRBAG (AMBER)



Illuminates as a bulb check, when the ignition is switched on, and extinguishes after 6 seconds.

If the lamp illuminates again, after the bulb check, or when driving, there is a fault with the airbag system. Seek qualified assistance as soon as possible.

## ADAPTIVE FRONT LIGHTING SYSTEM (AMBER)



Illuminates when there is a system fault. The headlamps will still operate, but without this feature operating correctly. Seek qualified assistance as soon as possible.

## REAR FOG LAMP (AMBER)



Illuminates when the rear fog lamps are switched on.

## GLOW PLUGS (AMBER)



Illuminates when the ignition is switched on, to indicate that the glow plugs are active.

## AUTOMATIC SPEED LIMITER (AMBER)



Illuminates when the Automatic Speed Limiter (ASL) is active.

## FOLLOW MODE (AMBER)



Illuminates when the Adaptive Cruise Control (ACC) system is in Follow mode.

## EXTERNAL TEMPERATURE (AMBER)



Illuminates when the external temperature is low enough that ice may be present on the road.

## LOW FUEL WARNING (AMBER)



Illuminates when the fuel level is low. Refuel at the earliest opportunity.

The arrow shows which side of the vehicle to locate the fuel filler cap.

## TYRE PRESSURE MONITORING SYSTEM (YELLOW)



The warning lamp illuminates, accompanied by a message in the Message centre, to warn that one or more tyres are significantly under-inflated. Stop the vehicle as soon as possible, check the tyre pressures and inflate to the recommended pressure.

The lamp will flash to indicate a system fault.