


SURROUND CAMERA SYSTEM

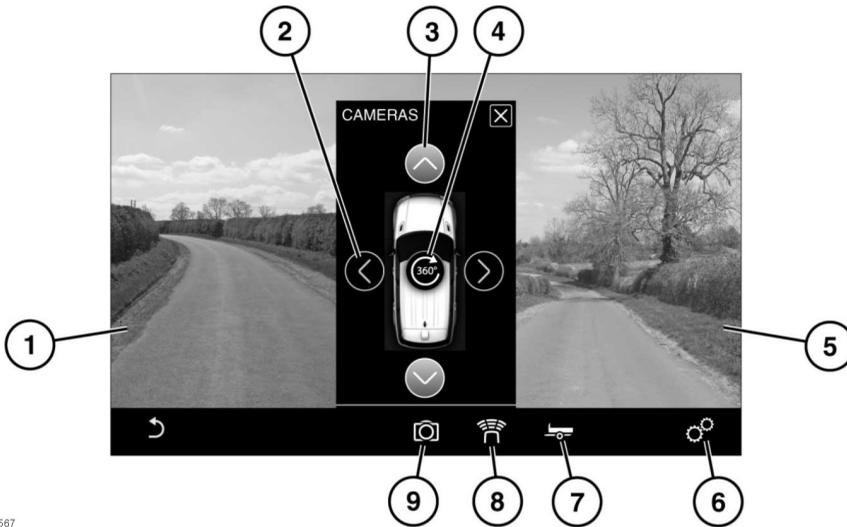

E165567



It remains the driver's responsibility to detect obstacles and estimate the vehicle's distance from them when manoeuvring the vehicle.



To turn on the Surround camera system, press the camera button on the left side of the touch screen or select **Cameras** in Extra features. See **80, EXTRA FEATURES**.

To view the camera menu screen touch the camera icon (9).

1. Left side split screen image.
2. Camera selection arrow (not selected).
3. Camera selection arrow (camera selected).
4. 360° view: Touch to display a birds-eye view of the vehicle and it's immediate surroundings using all 4 cameras.
5. Right side split screen image.
6. Touch to select the Camera settings menu.

- Hitch Assist, select OFF or ON.
- Parking Guidance, select OFF or ON.
- Parking Aid Graphics, select OFF or ON.
- PDC Plan View, select OFF or ON.

7. Touch to select Trailer assist. Before towing, select to add a trailer to the system or select a trailer already entered into the system. To add a trailer, follow the on-screen instructions.

8. Touch to select Parking aids. See **122, USING THE PARKING AID**.

9. Touch to select Surround cameras.

A maximum of 2 views can be displayed at one time (instead of the 360° view). To change a camera view if 2 views selected, one of the views has to be deselected first.



When shown, touch to enlarge to full screen or a wider view image.

General information:

The 4 surround cameras are located on the centre of the lower front grill, on the tailgate and underneath each of the exterior mirrors.

- The quality of the camera views may vary in different lighting conditions.
- To maintain optimum performance, the cameras should be kept free from ice, frost and dirt. See **197, SENSORS AND CAMERAS**.

Camera shortcuts



Press the Camera hard button for the following shortcut options:

- When in Reverse (**R**):
 - Press once to select the **Rear Junction** view.
 - Press twice to select the **T Junction View**.
 - Press a third time to return to the **Rear Junction** view.
- When in a forward gear, at speeds below 10 km/h (6 mph):
 - Press once to select the **T Junction View**.
 - Press twice to select the **Rear Junction** view.
 - Press a third time to return to the **T Junction View**.
- When in Neutral (**N**) or Park (**P**):
 - Press once to select the **Plan View**.
 - Press twice to select the **T Junction View**.
 - Press a third time to select the **Rear Junction** view.