


## SURROUND CAMERA SYSTEM

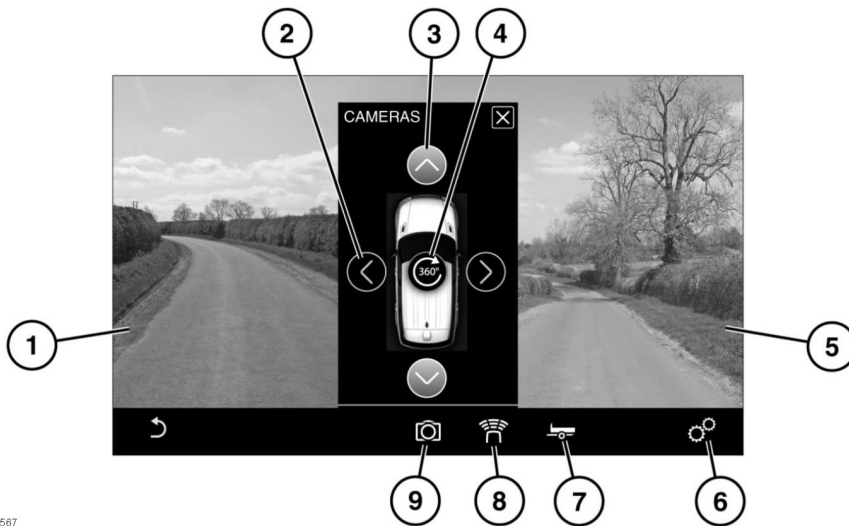

E165567



**It remains the driver's responsibility to detect obstacles and estimate the vehicle's distance from them when manoeuvring the vehicle.**



To turn on the Surround camera system, press the camera button on the left side of the touch screen or select **Cameras** in Extra features. See **80, EXTRA FEATURES**.

To view the camera menu screen touch the camera icon (9).

1. Left side split screen image.
2. Camera selection arrow (not selected).
3. Camera selection arrow (camera selected).
4. 360° view: Touch to display a birds-eye view of the vehicle and it's immediate surroundings using all 4 cameras.
5. Right side split screen image.
6. Touch to select the Camera settings menu.

- Hitch Assist, select OFF or ON.
- Parking Guidance, select OFF or ON.
- Parking Aid Graphics, select OFF or ON.
- PDC Plan View, select OFF or ON.

7. Touch to select Trailer assist. Before towing, select to add a trailer to the system or select a trailer already entered into the system. To add a trailer, follow the on-screen instructions.

8. Touch to select Parking aids. See **122, USING THE PARKING AID**.

9. Touch to select Surround cameras.

A maximum of 2 views can be displayed at one time (instead of the 360° view). To change a camera view if 2 views selected, one of the views has to be deselected first.



When shown, touch to enlarge to full screen or a wider view image.

General information:

The 4 surround cameras are located on the centre of the lower front grill, on the tailgate and underneath each of the exterior mirrors.

- The quality of the camera views may vary in different lighting conditions.
- To maintain optimum performance, the cameras should be kept free from ice, frost and dirt. See **197, SENSORS AND CAMERAS**.

### Camera shortcuts



Press the Camera hard button for the following shortcut options:

- When in Reverse (**R**):
  - Press once to select the **Rear Junction** view.
  - Press twice to select the **T Junction View**.
  - Press a third time to return to the **Rear Junction** view.
- When in a forward gear, at speeds below 10 km/h (6 mph):
  - Press once to select the **T Junction View**.
  - Press twice to select the **Rear Junction** view.
  - Press a third time to return to the **T Junction View**.
- When in Neutral (**N**) or Park (**P**):
  - Press once to select the **Plan View**.
  - Press twice to select the **T Junction View**.
  - Press a third time to select the **Rear Junction** view.