


METRIC/IMPERIAL/MIXED DISPLAY

The trip computer readings can be changed between metric, imperial and mixed units in the **Trip Computer** menu of the Message centre. See **49, INSTRUMENT PANEL MENU**.

Note: The temperature display can be changed between °C (Celsius) and °F (Fahrenheit), independently of Metric or Imperial units.

HEAD UP DISPLAY

The Head-Up Display (HUD) feature projects driver information onto the inside of the windscreen.

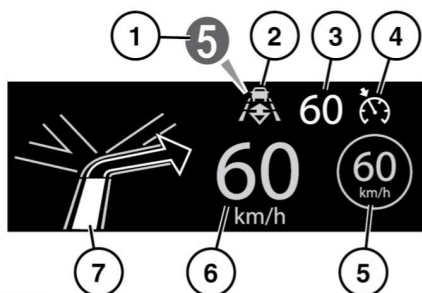

E160679

The information displayed is as follows:

1. Current gear selected.
2. Follow mode is active. See **135, ENTERING FOLLOW MODE**.
3. Cruise control set speed.
4. Cruise control or Adaptive Cruise Control (ACC) is active.
5. Traffic sign recognition, identified speed limit. See **147, TRAFFIC SIGN RECOGNITION**.
6. Current vehicle speed.
7. Turn-by-turn navigation instructions.

The HUD can be controlled from the **Head-Up Display** option in the Instrument panel menu. For more information, see **49, INSTRUMENT PANEL MENU**.

Once selected, the menu offers a number of options, including:

- Turning the HUD on/off.
- Selecting which information is displayed on the inside of the windscreen.
- The position of the display.
- The brightness of the display.

It is important that the position of the display is set correctly. The correct position is dependent on a number of conditions, including the height of the driver and the seat position.

Note: Before setting the position of the HUD, make sure that the driver's seat is correctly positioned. See **21, SITTING IN THE CORRECT POSITION**. The HUD level should be set horizontally, within the driver's vision.

To set the display position, select **HUD Position** from the **Head-Up Display** menu and follow the on-screen instructions. Use the driver's seat memory store button (**M**) to store your preferences. See **21, DRIVING POSITION MEMORY**.

The brightness of the display is set automatically to suit the ambient light conditions. Brightness can be manually adjusted to your preferred level by selecting **HUD Brightness** from the **Head-Up Display** menu. Follow the on-screen instructions and then press **OK** to confirm.

The HUD is linked to the Trip computer units settings. If fuel economy is set to mpg, the HUD will be in miles. If fuel economy is set to km/l, the HUD will be in kilometres. See **51, METRIC/IMPERIAL/MIXED DISPLAY**.

Instrument panel

Note: In extreme temperatures, the HUD takes a longer time to display from start-up. This is to make sure that the HUD always runs at its optimum temperature.

Note: It may not be possible to see the full HUD image, while wearing polarised sunglasses.

Note: Do not place anything over the HUD unit, which is positioned above the Instrument panel, next to the windscreen.

If cleaning is required, see **199, INSTRUMENT PANEL, TOUCH SCREEN AND AUDIO SYSTEM** and follow the same cleaning instructions.