




- Park assist must not be used if:
- A temporary spare wheel is in use.
  - A sensor is damaged or the bumper is damaged sufficiently to affect a sensor mounting point.
  - A sensor is obstructed by items attached to the vehicle, e.g., bumper covers, a bicycle rack, a trailer, stickers, etc.
  - The vehicle is being used to transport a load that extends beyond the vehicle's perimeter, for example, a trailer.

**Note:** All of the doors and the tailgate must be securely closed when using Park assist.

**Note:** During any Park assist manoeuvre, the Parking aid system will remain active and will sound when objects are detected near the vehicle.

## SELECTING PARK ASSIST

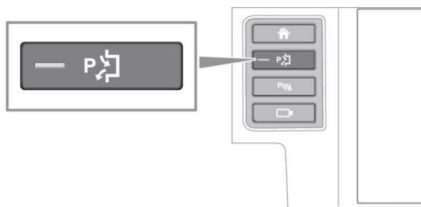

E159921

A short press of the Park assist button will turn the system on. The indicator on the Park assist switch will illuminate.

The Park assist button can be used to scroll through the 3 Park assist options:

1. A first press of the button turns the system on, and selects **Parallel park**.
2. A second press of the button selects **Perpendicular park**.
3. A third press of the button selects **Parking exit**.

4. A fourth press turns the system off; the indicator will extinguish.

When selected, all instructions for the 3 Park assist options are displayed in the Message centre. Always take action when the text or audio alerts an instruction.

## USING PARK ASSIST

For assistance when parking, select **Parallel** or **Perpendicular park**.

As the vehicle is driven forwards, the size of a potential parking space is assessed.

**Note:** For Park assist to search effectively, maintain a distance of 0.5 m to 1.5 m (1.6 ft to 4.9 ft) between the vehicle and the row of parked vehicles/obstacles between which you wish to park.

**Note:** When first activated, Park assist searches for a space on the passenger side of the vehicle. To search for a space on the driver's side, signal a turn in that direction (using the direction indicator).

**Note:** The Park assist auto searching feature becomes active when the vehicle's speed is less than 30 km/h (18 mph). When Park assist is activated, a previous space may already have been located. To obtain a previous space on the other side, signal a turn in that direction.

When a suitable space is found, a short confirmation tone is given and a message is displayed in the Message centre.

**Note:** If Park assist senses that other vehicles are too close, on either side, to perform a parking manoeuvre, a space will be rejected, even if it is large enough for the vehicle. The driver retains the option to switch Park assist off and attempt the manoeuvre manually.

For assistance in exiting a parking space, select **Parking exit**.